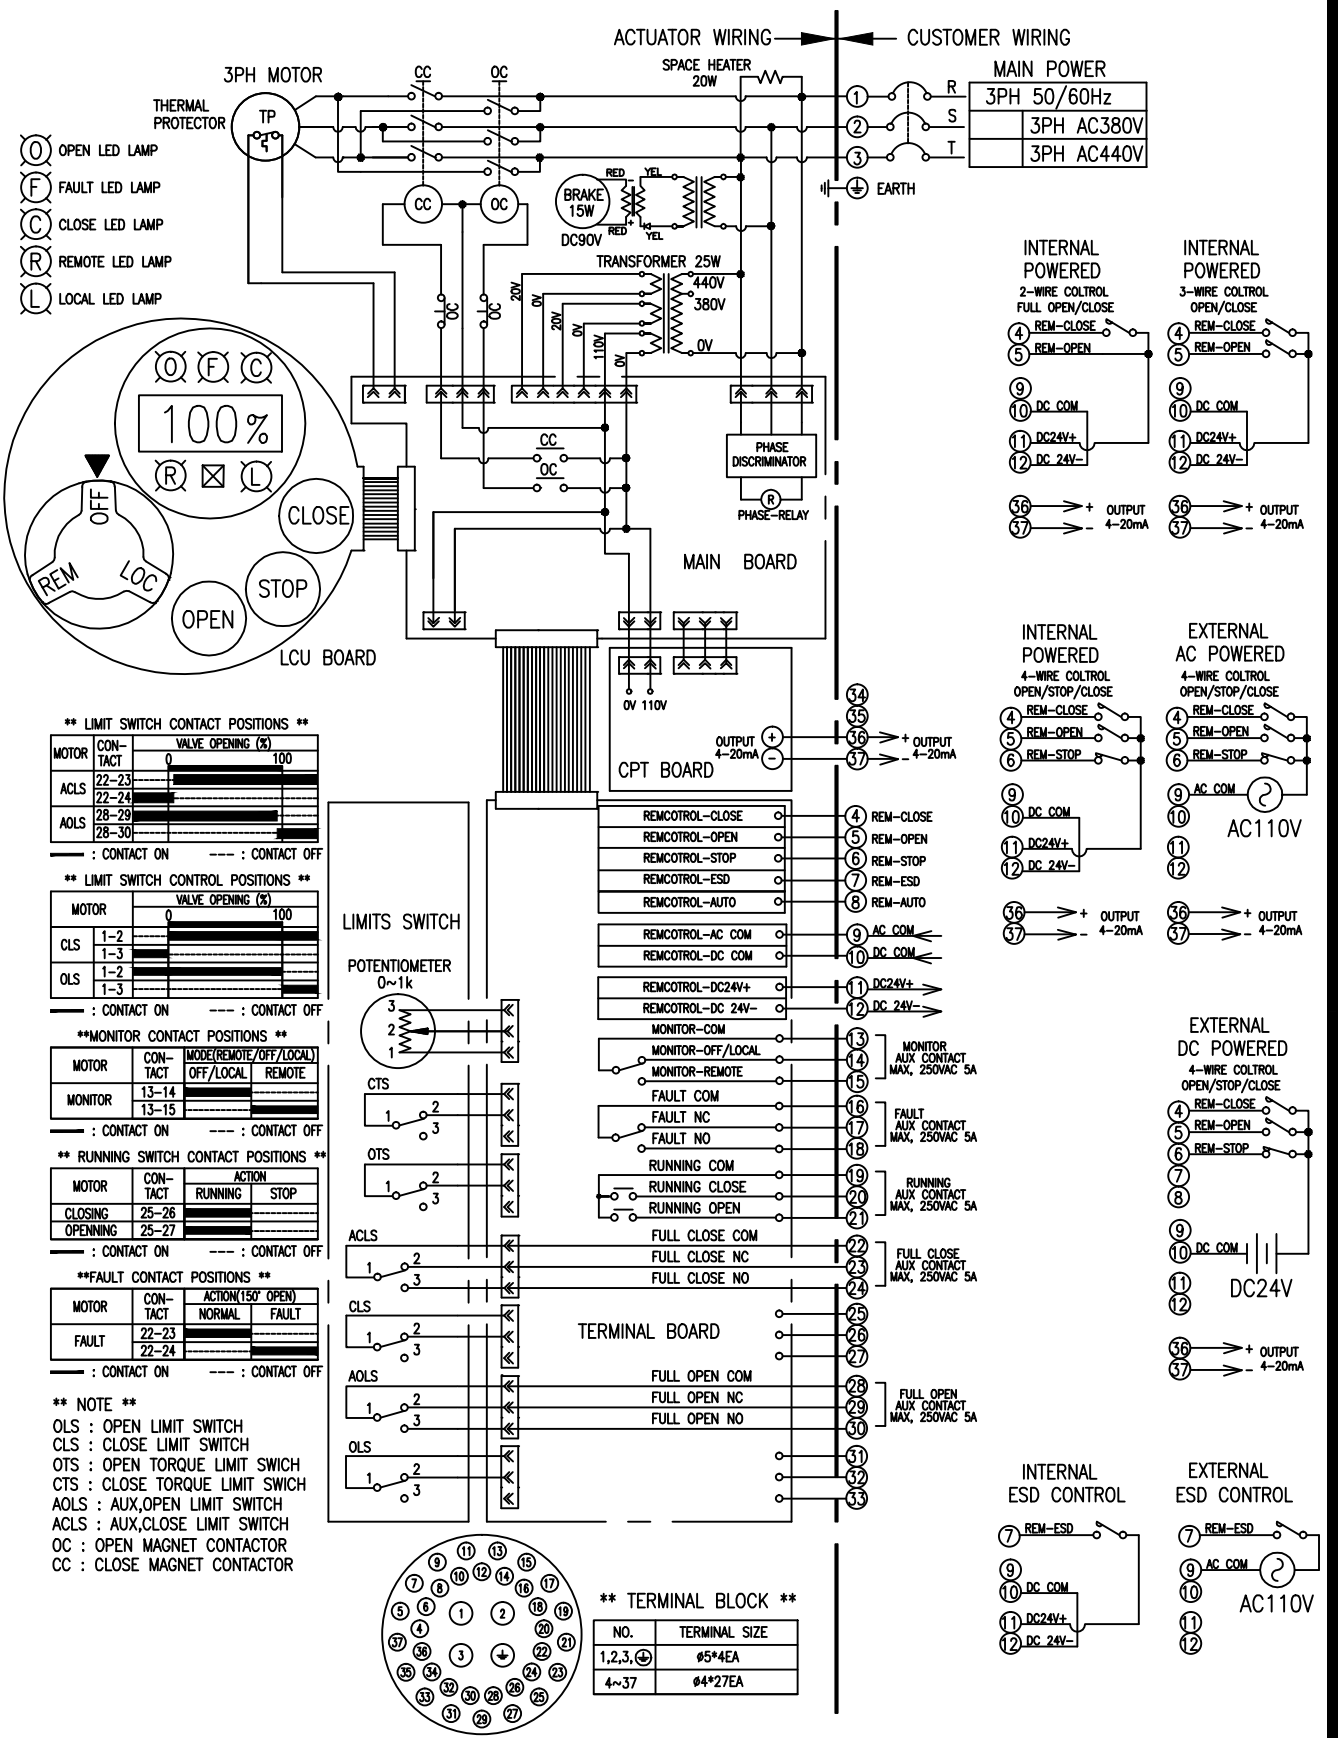

** LIMIT SWITCH CONTACT POSITIONS **

MOTOR	CON-TACT	VALVE OPENING (%) 0	100
ACLS	22-23	———	
	22-24		
AOLS	28-29	———	
	28-30		———

——— : CONTACT ON --- : CONTACT OFF

** LIMIT SWITCH CONTROL POSITIONS **

MOTOR		VALVE OPENING (%) 0	100
CLS	1-2		———
	1-3	———	
OLS	1-2		———
	1-3	———	

——— : CONTACT ON --- : CONTACT OFF

**MONITOR CONTACT POSITIONS **

MOTOR	CON-TACT	MODE(REMOTE/OFF/LOCAL) OFF/LOCAL	REMOTE
MONITOR	13-14		———
	13-15	———	

——— : CONTACT ON --- : CONTACT OFF

** RUNNING SWITCH CONTACT POSITIONS **

MOTOR	CON-TACT	ACTION RUNNING	STOP
CLOSING	25-26	———	
OPENNING	25-27		———

——— : CONTACT ON --- : CONTACT OFF

**FAULT CONTACT POSITIONS **

MOTOR	CON-TACT	ACTION(150° OPEN) NORMAL	FAULT
FAULT	22-23	———	
	22-24		———

——— : CONTACT ON --- : CONTACT OFF

** NOTE **
OLS : OPEN LIMIT SWITCH
CLS : CLOSE LIMIT SWITCH
OTS : OPEN TORQUE LIMIT SWICH
CTS : CLOSE TORQUE LIMIT SWICH
AOLS : AUX,OPEN LIMIT SWITCH
ACLS : AUX,CLOSE LIMIT SWITCH
OC : OPEN MAGNET CONTACTOR
CC : CLOSE MAGNET CONTACTOR

** TERMINAL BLOCK **

NO.	TERMINAL SIZE
1,2,3,⏚	ø5*4EA
4~37	ø4*27EA

SR50	1		DRAW H.S PARK	△				
SR30	1			SYM	E C N NO	CHANGES	DATE	SIGN	APPD
SR20	1		CHECK						
SR10	1		APPD	PART NAME		3PH WIRING DIAGRAM INTEGRAL CPT, FAIL OPEN			
SR05	1								
APPLICATION			DATE 25.07.01	DWG NO.		RUO-302-A			