


rotork®

Keeping the World Flowing
for Future Generations

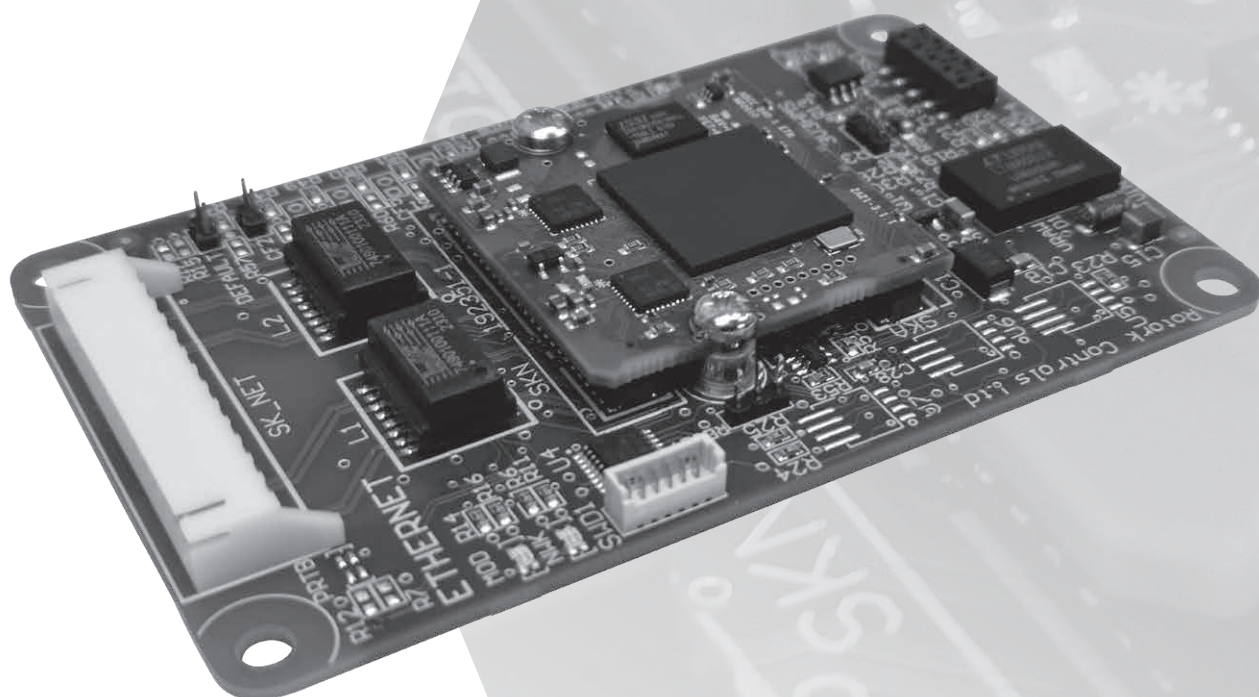

EtherNet/IP Option Card

Technical manual

Compatible with IQ3 Pro
and IQT3 Pro actuators

ODVA™
EtherNet/IP™

CE



The EtherNet/IP card described in this manual contains static-sensitive devices. Suitable precautions, such as wearing an earthed anti-static wrist strap, should be taken before handling the card. It should be kept in an anti-static bag or box while it is not fitted within an actuator.

Note 1:

Throughout this manual the EtherNet/IP option module may be referred to as the module, the EtherNet/IP option card, the option card or the card. EtherNet/IP is a trademark owned by ODVA.

Note 2:

The information in this manual relates to the following firmware releases:

- EtherNet/IP option card v103, v104 and v105

Differences between v103 and later versions:

- NAMUR features not available in v103
- Parameter indices 28 to 31 are reserved in v103
- Parameter indices 324 onwards are not available in v103
- Enum values 99 onwards (for relay functions) not available in v103

Firmware versions:

The table provides the minimum compatible firmware version for each Ethernet option card. Subsequent firmware releases will remain compatible:

Actuator firmware	Control board	User interface board
v103 version	v128	v207
v104 version	v133	v212
v105 version	v133	v212

This table shows the firmware within the Ethernet option card for the available versions of the Ethernet option card:

Ethernet option card	Actuator interface firmware	EtherNet/IP protocol firmware	Webpage
v103 version	v103	v1.58	v1.03
v104 version	v104	v1.62	v1.04
v105 version	v105	v1.62	v1.04

The EDS files associated with the EtherNet/IP option card can be downloaded from the Rotork ODVA Member Page at: <https://marketplace.odva.org/organizations/220-rotork-controls-ltd>. This location will always contain the latest version of EDS to be used with the latest firmware. The EDS files (in ZIP files) are also available for download from www.rotork.com:

Ethernet option card	EDS ZIP file name
v103 version	IQ3-IQT3 Pro EtherNetIP EDS v103.zip – Note within the EDS file the version listed is v1.01. The file name references v103 to make it clear it is to be used with v103 firmware.
v104 version	IQ3-IQT3 Pro EtherNetIP EDS v104.zip
v105 version	IQ3-IQT3 Pro EtherNetIP EDS v105.zip

Note 3:

This manual assumes a pre-existing level of knowledge of using the actuator that the EtherNet/IP option card is installed inside. It is recommended that the IQ3 Pro full configuration manual (PUB002-040) for the actuator is read prior to setting up EtherNet/IP with the actuator. Manuals can be downloaded from the Rotork website. This manual also assumes intermediate knowledge of the EtherNet/IP protocol and networks. Training is available via the ODVA website www.odva.org.

Contents

Acronyms and abbreviations	04
1 Introduction	05
1.1 EtherNet/IP	05
1.2 Safety information	05
2 EtherNet/IP option card properties	06
2.1 Mechanical properties	06
2.2 Electrical properties	06
2.3 Operation and storage	06
2.4 Inside an IQ3 Pro and IQT3 Pro actuator	06
2.5 Option card LEDs	07
3 Industrial Ethernet	08
3.1 Overview	08
3.2 Network topology	08
3.3 Cable and screening	09
3.4 Ethernet network security	10
4 Configuration of the EtherNet/IP option card	11
4.1 Factory default settings	11
4.2 Using a DHCP server to set up the EtherNet/IP card	11
4.3 Configuring the option card using the actuator menus	12
4.4 Configuring the option card using the web interface	14
4.4.1 Overview	14
4.4.2 Information	15
4.4.3 Parameters	15
4.4.4 Status and Alarms	15
4.4.5 Control Alarms	16
4.4.6 Hardware Status	16
4.4.7 Hardwired Status	16
4.4.8 Local Control Status	17
4.4.9 Network Status	17
4.4.10 Position Status	17
4.4.11 Power Status	18
4.4.12 Relay Status	18
4.4.13 Torque Status	18
4.4.14 IP Configuration	19
4.4.15 Remote Control	19
4.4.16 Data Log	20
4.5 Using Insight 2 to set up the EtherNet/IP option card	21
4.6 Configuring the Option Card using the Rockwell Automation AOP	24
4.6.1 EDS & AOP Firmware Version Compatibility	24
4.6.2 Identifying the Firmware Version of the Ethernet Option Card	25
5 Diagnostics	26
5.1 EtherNet/IP status attribute table	26
6 Parameters	27
6.1 EtherNet/IP parameter overview table	27
6.2 Producing and consuming data (implicit messaging)	33
6.2.1 Producing data (Assem100)	33
6.2.2 Consuming data (Assem150)	37
6.3 Bitfields	38
6.4 Enumerations	43
6.5 Parameter instance attributes	44

Acronyms and abbreviations

AOP	Rockwell Automation Add-On Profile for EtherNet/IP
CIP	Common Industrial Protocol
Comms	Communications
DCS	Data Concentrator System
DHCP	Dynamic Host Configuration Protocol
DLR	Device Level Ring
DNS	Domain Name System
EDS	Electronic Data Sheet
EMC	Electromagnetic Compatibility
EMI	Electromagnetic Interference
ESD	Electrostatic Discharge
HTTP	HyperText Transfer Protocol
iAM	Intelligent Asset Management
IP	Internet Protocol
LED	Light Emitting Diode
MAC	Media Access Control
ODVA	Open DeviceNet Vendors Association
PCBA	Printed Circuit Board Assembly
PLC	Programmable Logic Controller
SCADA	Supervisory Control And Data Acquisition
TCP	Transport Control Protocol
UDP	User Datagram Protocol

1 Introduction

This document gives instructions for commissioning the EtherNet/IP option card.

1.1 EtherNet/IP

The card has been certified for EtherNet/IP compliance by ODVA.

Rotork can be found as a licensed vendor on the ODVA website. EDS files associated with the EtherNet/IP option card can be downloaded from the Rotork ODVA Member Page at <https://marketplace.odva.org/organizations/220-rotork-controls-ltd>

The option card has two physical connection options that must be selected at the time of order, either 2 x RJ45 or 2 x M12, with transmission speeds of up to 100 Mbps, full duplex. Communications are established using auto negotiation and auto crossover, by default.

Due to the presence of two Ethernet ports, the option card is capable of being used in various network topologies, including:

- Ring (including Beacon Based Device Level Ring - DLR)
- Star
- Line

The card indicates a loss of connection when one or more CIP Class 1 or 3 connections are lost.

The EtherNet/IP option circuits do not impinge on the actuator control electronics; the actuator itself remains fully self-protecting. The module performs the tasks of network interface, actuator data collection and the issuing of actuator commands to open, stop, close, perform an ESD operation, or move to a desired value (DV) position.



Fig 1: The option card is compatible with IQ3 Pro (left) and IQT3 Pro (right) actuators

⚠ Note: Always refer to the appropriate EDS version as the 'source of truth' for the parameters and functions within your actuator EtherNet/IP option card.

1.2 Safety information

The control switch on the front panel must be in the 'STOP' position during commissioning of the option card, this will prevent all movement of the drive shaft.

The control switch is a 3-position switch, as described in [PUB002-040](#). The actuator is powered by AC and DC voltages, as specified in [PUB002-197](#). In normal circumstances this mains power is not exposed to the user but may be exposed if the terminal cover is removed during installation of the Ethernet cables to the RJ45 or M12 connectors. It is important that the actuator is isolated from mains power when removing the terminal cover when accessing the RJ45 or M12 connectors.

2 EtherNet/IP option card properties

2.1 Mechanical properties

The option card is installed inside the actuator, mounting directly onto the main control board of the actuator using 4 Torx screws. All the connectors are polarised to prevent incorrect insertion.

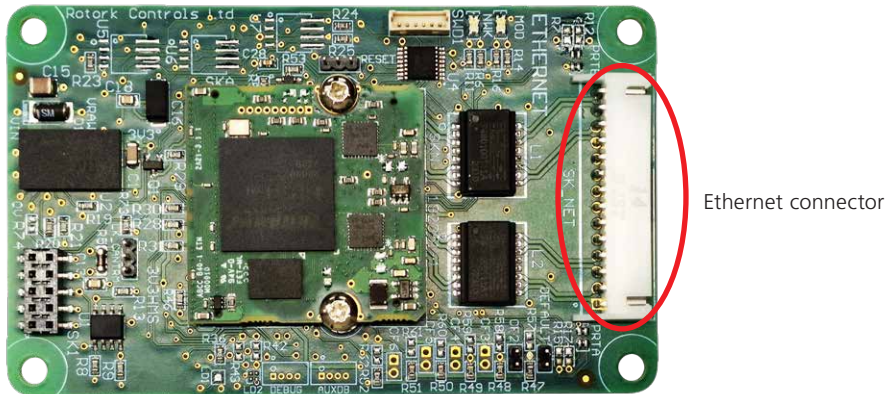


Fig 2: EtherNet/IP option card

2.2 Electrical properties

The option card external network connections are fully isolated from the actuator electronics.

2.3 Operation and storage

The option card is designed to be stored in the actuator and operated within the same environment as the actuator.

The constraints are:

- Operating temperature: -40 to +70 °C (-40 to +158 °F)
- Storage temperature: -50 to +85 °C (-58 to +185 °F)
- Relative humidity: 5 to 95% (<50 °C (<122 °F)) non-condensing

2.4 Inside an IQ3 Pro and IQT3 Pro actuator

The option card is suitable for fitting into IQ3 Pro actuators. The connections and fitting in an IQT3 Pro are similar to that for an IQ3 Pro and the following information effectively relates to both actuator types. The option card can be located into either of the two mounting locations available on the main PCB.

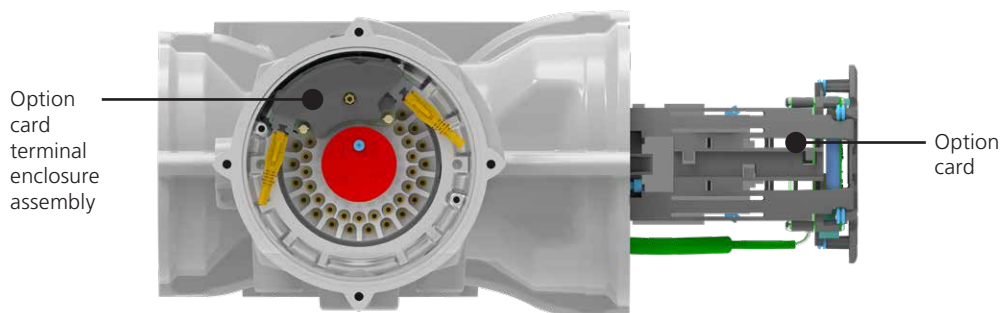


Fig 3: Option card and terminal enclosure locations

2 EtherNet/IP option card properties

2.5 Option card LEDs

If the actuator cover is opened there are several LEDs on the circuit board that are used to indicate communication activity. These indicate the communication between the network and the card. Alternatively the presence of an Ethernet connection can be observed on the EtherNet/IP menu on the actuator display or the availability of the webpages.

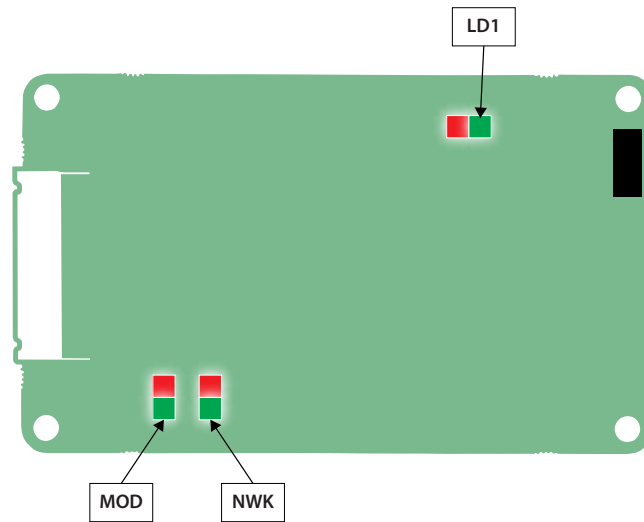


Fig 4: EtherNet/IP card LED positions

LED	Appearance	Meaning
MOD	Off	No power
MOD	Green	Controlled by scanner in Run state
MOD	Green flashing	Not configured, or scanner in Idle state
MOD	Red	Major fault
MOD	Red flashing	Recoverable fault(s), or module configured but stored parameters differ from currently used parameters
NWK	Off	No power or no IP address
NWK	Green	Online, one or more CIP Class 1 or 3 connections established
NWK	Green flashing	Online, no connections established
NWK	Red	Duplicate IP address, FATAL error
NWK	Red flashing	One or more CIP Class 1 or 3 connections timed out
LD1	Alternating red and green	Normal operation
LD1	Alternating 2 red and 1 green	Option card communication issue with its network module
LD1	Alternating 4 red and 1 green	Option card FTP Enabled
LD1	Alternating red and 2 green	Communication issue between option card and actuator control board

3 Industrial Ethernet

3.1 Overview

Ethernet is a family of computer networking technologies, invented in the early 1970's, commercially introduced in 1980 and first standardised in 1983 as IEEE 802.3. It is used extensively throughout the world.

In its most basic form, it is a means of carrying data between two points in a digital format. The data is packaged into message telegrams, which also include routing data, error checking and message type information.

The Ethernet specification is a transmission protocol which covers the bottom two layers in the OSI 7-layer comms model:

- It defines the specification for the Physical Layer interface, i.e. cabling and devices
- It also defines how data is routed through a network or series of networks, known as the Data Link Layer comprising of Logical Link Control (LLC) and Media Access Control (MAC)

The various Industrial Ethernet communications protocols 'sit' on top of the Ethernet Physical and Data Link layers, the figure below shows a simplified presentation of some of the protocols that reside in each OSI layer.

Application Process	EtherNet/IP	Modbus TCP	PROFINET	Webpages
7: Application Layer	CIP	Modbus	PROFINET	HTTP
6: Presentation Layer				
5: Session Layer				
4: Transport Layer	TCP/UDP	TCP	TCP/UDP	TCP
3: Network Layer	IP	IP	IP	IP
2: Datalink Layer	Ethernet	Ethernet	Ethernet	Ethernet
1: Physical Layer				

Ethernet refers only to the Physical and Datalink layers of the OSI model, and should not be confused with EtherNet/IP.

3.2 Network topology

Ethernet can be configured in several topologies, the most common ones are illustrated below.

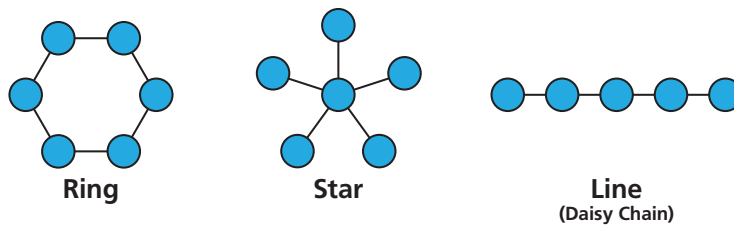


Fig 5: Common network topologies

Beacon Based Device Level Ring (DLR) is also supported. DLR is a network technology in industrial automation that enables controllers and I/O modules to create Ethernet ring networks.

3 Industrial Ethernet

3.3 Cable and screening

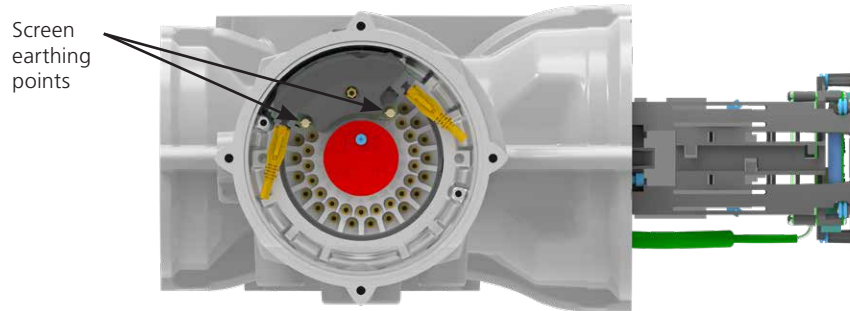


Fig 6: Screen earthing screw locations

Cable and screening

It is recommended that industrial grade dual pair screened CAT5 or CAT6 cables are used, due to their superior mechanical and electrical properties.

In the industrial environment, there are potential issues surrounding inadequate equipotential bonding, particularly on mature sites. For this reason, careful consideration needs to be given to the earthing of the screens of signal and communications cable. However, sites may have policies or rules regarding the connection of both ends of a cable to earth.

Screen connection options

It is the assumption that the screens of Ethernet cables should be earthed at both ends as a protection against EMI of all types. This is the optimum configuration and should be used if possible.

It is further assumed that the screens will be earthed by default at the 'central point,' e.g., PLC, DCS, etc.

To earth the Ethernet cable at the actuator, in order of preference, either:

- Use an 'EMC' gland to earth the screen at the point of entry into the enclosure
- Ensure the screw is fitted to the screen earthing point for the Ethernet port(s) used, as shown in the diagram above (Fig 6)

If earthing the Ethernet cable at the actuator is not required, in order of preference, either:

- On the Ethernet port that the earthing is not required, remove the earthing screw from the screen earthing point. This will allow the default termination of 1nF in parallel with 1M Ω to earth on that port
- Crop the cable screen so that the chosen connector does not have a screen connection

For situations that make use of both Ethernet ports (i.e. Ring or Line topology), the earthing arrangements may need to be different for each port. For instance, in a Ring connected system, each leg needs to be earthed at one or both ends. This must take place at the actuators since the cable only connects between actuators. In other topologies employing switches or routers, there are more options.

3 Industrial Ethernet

3.4 Ethernet network security

When installing an Ethernet control network an assessment of the level of security required should be made. Security policies may require modification appropriate for the control and business networks.

Coordination between IT (Information Technology) and OT (Operational Technology) network teams is required to ensure a suitable network infrastructure is implemented.

For example, IT departments may use remote access to periodically maintain and update devices on the business network; these routine updates could disrupt the operation of the control system network. Additionally, control system software updates and configuration must be strictly controlled as remote connections may introduce security risks.

The security guidance in this document is intended to help the user implement and maintain reasonable security of the Ethernet actuator. However, no security implementation can guarantee to protect against all existing, new, or previously unknown threats. Rotork does not guarantee that adherence to these and any other security recommendations will protect the Ethernet actuator from security breaches and any subsequent impact on process in which the Ethernet actuator is involved with.

Many common industrial control protocols (e.g. Modbus/TCP, PROFINET, EtherNet/IP) do not encrypt data and so offer no protection against third parties monitoring data or injecting commands. Therefore we would recommend:

- Segregating networks where possible to control the flow and availability of data. The Purdue model is a good example of this
- Physical security of the network is reviewed and controlled to ensure that no third parties can access it
- Default passwords on devices be changed during installation/commissioning to ensure that access be limited to approved users

4 Configuration of the EtherNet/IP option card

4.1 Factory default settings

A Rotork actuator fitted with an EtherNet/IP option card leaves the factory with the following default settings:

Host Name:	""	Port 1 Network Speed:	Auto Negotiate
DHCP Enabled:	Enabled	Port 2 Network Speed:	Auto Negotiate
Domain Name:	""	Command Filter Delay (ms):	250
IP Address:	0.0.0.0	FTP Enabled:	Disabled
Subnet Mask:	0.0.0.0	Webpage Admin Password:	ROTACT
Gateway Address:	0.0.0.0	Webpage Engineer Password:	ROTORK
Primary DNS server:	0.0.0.0		
Secondary DNS server:	0.0.0.0		

Notes:

- Webpage passwords should be changed from default during commissioning
- Command Filter Delay is the fastest rate which repeat-value write operations to each parameter is sent to the actuator control board

For example, the EtherNet/IP scanner could be writing desired position to parameter 23, DesiredPosition, every 10 ms. Each write operation sends the same value of 3,000 (position 30.0%). The option card detects repeat-value write operations, and only forwards the desired position value to the actuator control board every 250 ms (which is the default delay)

If the value being written to the parameter is different from the last, then the command is immediately forwarded to the actuator control board

4.2 Using a DHCP server to set up the EtherNet/IP card

The EtherNet/IP option card has a DHCP client service enabled by default. The network settings can be set using a DHCP server connected to the same network as the actuator.


The network settings can be checked using Insight 2 and the Rotork Bluetooth® Setting Too Prol.

4 Configuration of the EtherNet/IP option card


4.3 Configuring the option card using the actuator menus

Before you begin, read the appropriate safe use manual: [PUB002-039](#) for multi-turn IQ3 Pro actuators or [PUB002-065](#) for part-turn IQT3 Pro actuators and the full configuration manual, [PUB002-040](#). Check for any errors that may affect the configuration and resolve them. An example is the text "Hardware Error" appearing at the top of the display. Check the Remote Control menu, as described in [PUB002-040](#).


From the home screen select **Settings**.

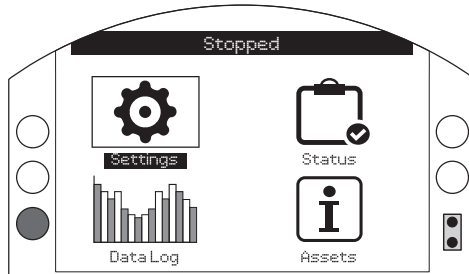


From the **Settings** menu, select **Control**.

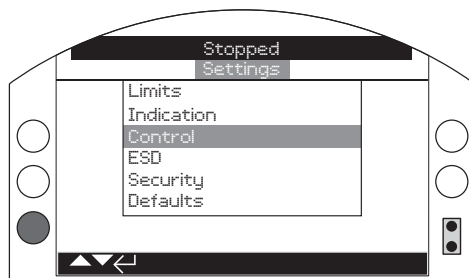

From the **Control** menu, select **Remote**.

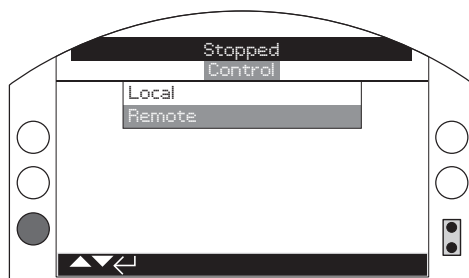

From the **Remote** menu, select **EtherNet/IP**. Note that this option appears only when the option card is fitted.


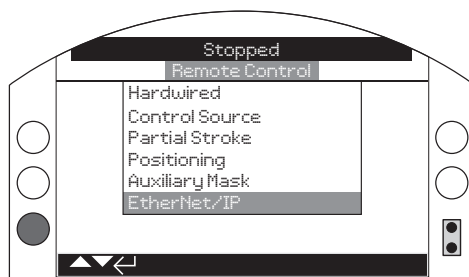


4 Configuration of the EtherNet/IP option card

You have now reached the **EtherNet/IP** menu. The screen below is an example where the IP Address is static.

Note that there must be an Ethernet link established with the option card for IP settings to appear, otherwise zeros will be shown. It can take up to 15 seconds for IP settings to appear or disappear when Ethernet link is made or lost respectively.

Also note that when configuring the IP settings, changes take up to 15 seconds to appear. If the IP changes are not successful, the settings will revert to previous values or default values stated in Section 4.1 Factory default settings.

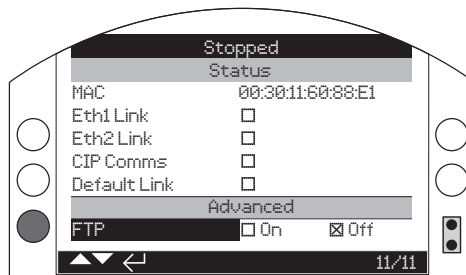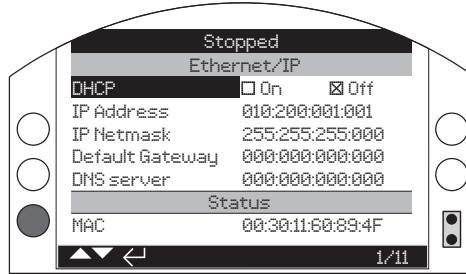


- | | |
|-----------------------------|--|
| 1/11 DHCP | Set this to On if you are using a DHCP server, Off otherwise. |
| 2/11 IP Address | This is the IP address of the actuator and should follow your normal address sequence for your network. Use the ← and → keys to edit the values, as you would for changing tags and passwords on other actuator screens and ⏪ and ⏩ keys to move between characters. This does not need to be set if DHCP is on. |
| 3/11 IP Netmask | This is usually set to 255.255.255.0, unless required otherwise by your Ethernet network. |
| 4/11 Default Gateway | This should be set to 0.0.0.0, unless you are using a gateway. |
| 5/11 DNS server | The primary DNS server used by the option card. It is common practice to use numerical IP addresses but there is an option to use a DNS server. If you are not using one, this should be set to 0.0.0.0. |
| 6/11 MAC | MAC address of the option card. |
| 7/11 Eth1 Link | Indicates whether Ethernet link is present on Port 1. |
| 8/11 Eth2 Link | Indicates whether Ethernet link is present on Port 2. |
| 9/11 CIP Comms | Indicates whether one or more CIP (Class 1 or Class 3) connections are established. |
| 10/11 Default Link | Indicates whether the default hard wire link is inserted in the option card during power-up or firmware reset. If the default link is inserted, option card configurations are set to default values. |
| 11/11 FTP | Indicates whether FTP is enabled and remote control of the actuator is disabled. |


4 Configuration of the EtherNet/IP option card

4.4 Configuring the option card using the web interface

Enter the IP address of your actuator in your browser and press return. The home page shows the serial number of the actuator and network type to determine whether you have connected to the correct device. The home page and banner on the bottom line are shown below. Note that the banner on the bottom line appears on every webpage.

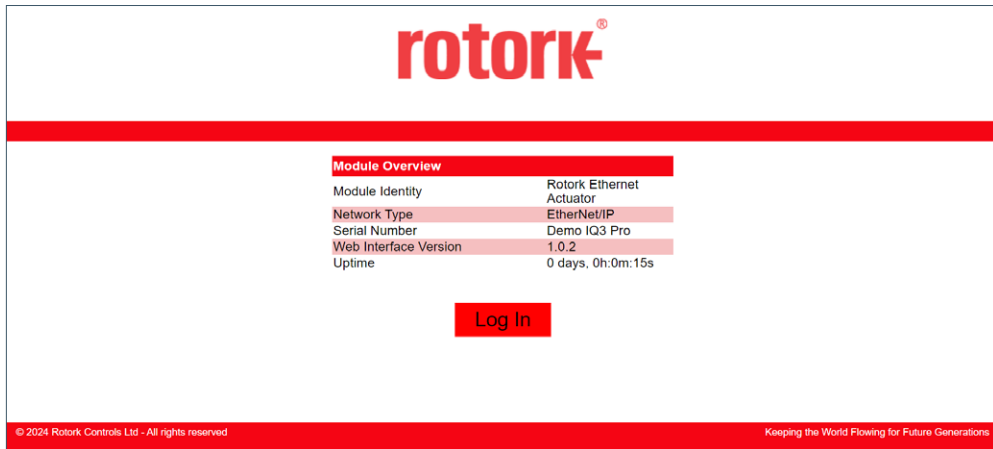

Click on the Log In button. You will be prompted to enter the username and password.

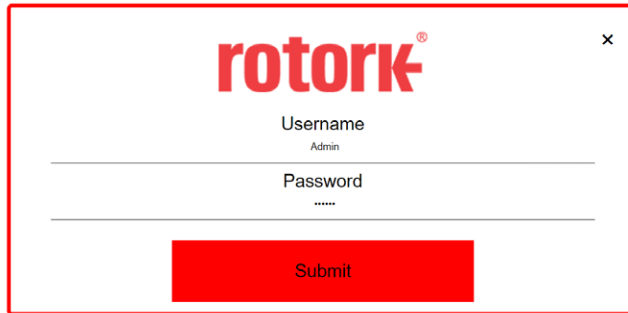


To Log on, enter the username ("Admin" or "Engineer") and password that has been assigned to the actuator using Insight 2. Refer to Section 4.1 Factory default settings for default webpage passwords. Passwords can be changed by connecting to the actuator using Insight 2. The two possible usernames are:

Engineer: Permission to read and write data from the option card.

Admin: Permission to read only.

Once logged in, the **Overview page** appears.

4.4.1 Overview

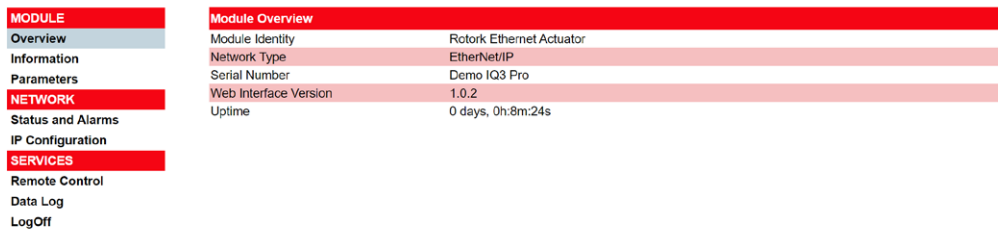

The **module overview** gives basic information about the actuator. Note that the serial number is free-form text, used to identify each actuator.

The **menu** is located at the left hand side of the page. It remains visible on all other pages.

You can select further pages, as follows:

4 Configuration of the EtherNet/IP option card


4.4.2 Information

MODULE	Module Information
Overview	Actuator Type IQ3 Pro
Information	Actuator Tag EoC
Parameters	Ethernet Port Status Connected
NETWORK	Ethernet Port Traffic Port 1
Status and Alarms	Communication Status Active
IP Configuration	Software Versions
SERVICES	Main Board v128 (134)
Remote Control	UI Board v207 (61)
Data Log	Ethernet Option Card v102 (3095)
LogOff	

This gives further details about the option card and actuator, and lists the software versions.

4.4.3 Parameters

This page shows the parameters listed in Section 6, Parameters. This page does not automatically refresh, so there is a Refresh button on the top right corner. The parameters are split into multiple pages. The parameter pages can be navigated using the arrow keys located at the top of the parameters table.

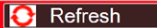MODULE	◀ 1 ▶▶	
Overview		
Information		
Parameters		
NETWORK		
Status and Alarms		
IP Configuration		
SERVICES		
Remote Control		
Data Log		
LogOff		

#	Name	Value
1	StatusData1	0x0000
2	StatusData2	0x000C
3	StatusData3	0x0081
4	StatusData4	0x0000
5	AlarmData1	0x0800
6	AlarmData2	0x0001
7	AlarmData3	0x0000
8	AlarmData4	0x0001
9	DigitalControlIndication	0x0000
10	DesiredPositionIndication	0
11	Position	5000

4.4.4 Status and Alarms

MODULE
Overview
Information
Parameters
NETWORK
Status and Alarms
▪ Control Alarms
▪ Hardware Status
▪ Hardwired Status
▪ Local Control Status
▪ Network Status
▪ Position Status
▪ Power Status
▪ Relay Status
▪ Torque Status
IP Configuration
SERVICES
Remote Control
Data Log
LogOff

Clicking on Status and Alarms reveals more pages which can be accessed.

4 Configuration of the EtherNet/IP option card

4.4.5 Control Alarms

MODULE	Control Alarms		
Overview	Control Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Information	Valve Travel Time Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Parameters	Auxiliary Override Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
NETWORK	Stall	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Status and Alarms	End of Travel Timer Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Control Alarms	Valve Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Hardware Status	Actuator Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Hardwired Status	Partial Stroke Fail	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Local Control Status	Control Contention	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Network Status	Communication / Signal Loss Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Position Status			
Power Status			
Relay Status			
Torque Status			
IP Configuration			
SERVICES			
Remote Control			
Data Log			
LogOff			

This page shows the actuator alarms, as detailed in [PUB002-040](#).

4.4.6 Hardware Status

MODULE	Hardware Status		
Overview	NAMUR Maintenance Needed	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Information	NAMUR Out of Specification	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Parameters	NAMUR Function Check	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
NETWORK	NAMUR Failure	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Status and Alarms	Critical Fault	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Control Alarms	Non Critical Fault	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Hardware Status	Vibration Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Hardwired Status	Thermostat Alarm	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Local Control Status	EEPROM Error	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Network Status			
Position Status			
Power Status			
Relay Status			
Torque Status			
IP Configuration			
SERVICES			
Remote Control			
Data Log			
LogOff			

This page shows the hardware status, as detailed in [PUB002-040](#).

4.4.7 Hardwired Status

MODULE	Digital Input Status		
Overview	Digital Input 1 (Remote Open)	<input checked="" type="radio"/> Low	<input type="radio"/> High
Information	Digital Input 2 (Remote Close)	<input checked="" type="radio"/> Low	<input type="radio"/> High
Parameters	Digital Input 3 (Remote Maintain)	<input checked="" type="radio"/> Low	<input type="radio"/> High
NETWORK	Digital Input 4 (Remote ESD)	<input checked="" type="radio"/> Low	<input type="radio"/> High
Status and Alarms	Digital Input 5 (Close Interlock)	<input checked="" type="radio"/> Low	<input type="radio"/> High
Control Alarms	Digital Input 6 (Open Interlock)	<input checked="" type="radio"/> Low	<input type="radio"/> High
Hardware Status	Input Function Status		
Hardwired Status	Open Interlock	<input checked="" type="radio"/> Low	<input type="radio"/> High
Local Control Status	Close Interlock	<input checked="" type="radio"/> Low	<input type="radio"/> High
Network Status	Network Disable	<input type="radio"/> Low	<input checked="" type="radio"/> High
Position Status			
Power Status			
Relay Status			
Torque Status			
IP Configuration			
SERVICES			
Remote Control			
Data Log			
LogOff			

This shows the status of the digital inputs and input function status, as detailed in [PUB002-040](#).

4 Configuration of the EtherNet/IP option card

4.4.8 Local Control Status

MODULE	Local Control Status	
Overview	Remote Control	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
Information	Local Control	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
Parameters	Local Stop	<input type="radio"/> Inactive <input checked="" type="radio"/> Active
NETWORK	Local Command While in Remote	<input checked="" type="radio"/> No Error <input type="radio"/> Error
Status and Alarms		
▪ Control Alarms		
▪ Hardware Status		
▪ Hardwired Status		
▪ Local Control Status		
▪ Network Status		
▪ Position Status		
▪ Power Status		
▪ Relay Status		
▪ Torque Status		
IP Configuration		
SERVICES		
Remote Control		
Data Log		
LogOff		

This shows the status of the local control switch, as detailed in [PUB002-040](#).

4.4.9 Network Status

MODULE	Current IP Settings	
Overview	DHCP:	Disabled
Information	IP Address:	13.107.64.5
Parameters	Subnet Mask:	255.255.192.0
NETWORK	Gateway Address:	0.0.0.0
Status and Alarms	Host Name:	
▪ Control Alarms	Domain name:	
▪ Hardware Status	DNS Server #1:	0.0.0.0
▪ Hardwired Status	DNS Server #2:	0.0.0.0
▪ Local Control Status		
▪ Network Status		
▪ Position Status		
▪ Power Status		
▪ Relay Status		
▪ Torque Status		
IP Configuration		
SERVICES		
Remote Control		
Data Log		
LogOff		

	Current Ethernet Status	
	MAC Address:	00:30:11:60:88:E1
	Port 1:	100 FDX
	Port 2:	No Link

The Network Status page shows similar items to that of the EtherNet/IP menu on the actuator display.

4.4.10 Position Status

MODULE	Position Calibration	
Overview	Position (%)	50.0%
Information	Position Raw Units	5000
Parameters		
NETWORK	Position Status	
Status and Alarms	Motor Operating	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Control Alarms	Output Moving	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Hardware Status	Stopped Mid Travel	<input type="radio"/> Inactive <input checked="" type="radio"/> Active
▪ Hardwired Status	Moving Open	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Local Control Status	Moving Closed	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Network Status	Closed Limit	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Position Status	Open Limit	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Power Status	Movement Inhibited by Interrupter Timer	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Relay Status	Movement Inhibited by Motion Inhibit Timer	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
▪ Torque Status	Partial Stroke Operation	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
IP Configuration	Position Sensor Fault	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
SERVICES	Manual Operation	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
Remote Control	Manual Movement Close	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
Data Log	Manual Movement Open	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
LogOff	Manual Movement to Closed Limit	<input checked="" type="radio"/> Inactive <input type="radio"/> Active
	Manual Movement to Open Limit	<input checked="" type="radio"/> Inactive <input type="radio"/> Active

This shows the position calibration and status, as detailed in [PUB002-040](#).

4 Configuration of the EtherNet/IP option card

4.4.11 Power Status

MODULE	Power Supply Status		
Overview	Actuator Loss of Phase	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Information	24VDC Supply Failure	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Parameters	Mains Supply Failure	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
NETWORK	Battery Low	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Status and Alarms	Battery Flat	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
<ul style="list-style-type: none"> ▪ Control Alarms ▪ Hardware Status ▪ Hardwired Status ▪ Local Control Status ▪ Network Status ▪ Position Status ▪ Power Status ▪ Relay Status ▪ Torque Status 			
IP Configuration			
SERVICES			
Remote Control			
Data Log			
LogOff			

This shows the status of the power supply, as detailed in [PUB002-040](#).

4.4.12 Relay Status

MODULE	Relay Status		
Overview	Monitor Relay - Remote Control	<input type="radio"/> Available	<input checked="" type="radio"/> Inhibited
Information	Relay 1	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Parameters	Relay 2	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
NETWORK	Relay 3	<input type="radio"/> Inactive	<input checked="" type="radio"/> Active
Status and Alarms	Relay 4	<input type="radio"/> Inactive	<input checked="" type="radio"/> Active
<ul style="list-style-type: none"> ▪ Control Alarms ▪ Hardware Status ▪ Hardwired Status ▪ Local Control Status ▪ Network Status ▪ Position Status ▪ Power Status ▪ Relay Status ▪ Torque Status 	Relay 5	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
IP Configuration	Relay 6	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
SERVICES	Relay 7	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Remote Control	Relay 8	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Data Log	Relay 9	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
LogOff	Relay 10	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
	Relay 11	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
	Relay 12	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active

This shows the status of the relays, as detailed in [PUB002-040](#). Not all relays are fitted on all actuators. Relays which are not fitted will show as inactive.

4.4.13 Torque Status

MODULE	Torque Values		
Overview	Torque (%)	30	
Information	Raw Torque	300	
Parameters	Torque Status		
NETWORK	Stopped On Torque Mid Travel	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Status and Alarms	Stopped On Torque Clockwise	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
<ul style="list-style-type: none"> ▪ Control Alarms ▪ Hardware Status ▪ Hardwired Status ▪ Local Control Status ▪ Network Status ▪ Position Status ▪ Power Status ▪ Relay Status ▪ Torque Status 	Stopped On Torque Anti-Clockwise	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
IP Configuration	Torque Sensor Fault	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
SERVICES	Valve Obstructed	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Remote Control	Valve Jammed	<input checked="" type="radio"/> Inactive	<input type="radio"/> Active
Data Log			
LogOff			

This shows the torque measurements, as detailed in [PUB002-040](#).

4 Configuration of the EtherNet/IP option card

4.4.14 IP Configuration

MODULE	IP Configuration
Overview	DHCP Disabled
Information	IP Address 13.107.64.5
Parameters	Subnet Mask 255.255.192.0
NETWORK	Gateway Address 0.0.0.0
Status and Alarms	Host Name
▪ Control Alarms	Domain name
▪ Hardware Status	DNS Server #1 0.0.0.0
▪ Hardwired Status	DNS Server #2 0.0.0.0
▪ Local Control Status	
▪ Network Status	
▪ Position Status	
▪ Power Status	
▪ Relay Status	
▪ Torque Status	
IP Configuration	Save settings
SERVICES	
Remote Control	
Data Log	
LogOff	
	Ethernet Configuration
	Port 1 Auto
	Port 2 Auto
	Save settings

This displays the same data as the Network Status page but also allows you to edit the settings. Note that if the IP address of the option card is changed, the new IP address must be used to access the webpages.

4.4.15 Remote Control

MODULE	Digital Control
Overview	Open Set
Information	Close Set
Parameters	Stop Set
NETWORK	Partial Stroke Set
Status and Alarms	Position Control
▪ Control Alarms	Position Enable
▪ Hardware Status	Position
▪ Hardwired Status	Position (%) 50.0%
▪ Local Control Status	Position Raw Units 5000
▪ Network Status	
▪ Position Status	
▪ Power Status	
▪ Relay Status	
▪ Torque Status	
IP Configuration	
SERVICES	
Remote Control	
Data Log	
LogOff	

This allows you to control the actuator remotely.

⚠ Prior to controlling the actuator remotely using this method, check parameter instance #39 ActionOnLossOfComms. Following a remote control operation using the option card web interface; the actuator will execute the action specified in parameter instance #39 ActionOnLossOfComms if there is no CIP Class 1 or 3 connection established. To prevent an action being taken, ensure the ActionOnLossOfComms is set to None (no action).

4 Configuration of the EtherNet/IP option card

4.4.16 Data Log

The screenshot displays a web-based interface for 'Data Log Management'. On the left is a sidebar menu with the following items: 'MODULE' (highlighted in red), 'Overview', 'Information', 'Parameters', 'NETWORK' (highlighted in red), 'Status and Alarms' (with sub-items: Control Alarms, Hardware Status, Hardwired Status, Local Control Status, Network Status, Position Status, Power Status, Relay Status, Torque Status), 'IP Configuration', 'SERVICES' (highlighted in red), 'Remote Control', 'Data Log' (highlighted in light blue), and 'LogOff'. The main content area at the top is a red bar labeled 'Data Log Management'. Below this, a red button labeled 'Compile Data Log' is visible.


This allows you to retrieve the data log and configuration from the actuator. Note that the data log file is a binary file, and can only be processed by being sent to a remote system for analysis. An example of a suitable remote system is the Rotork iAM product.

4 Configuration of the EtherNet/IP option card



4.5 Using Insight 2 to set up the EtherNet/IP option card

See [PUB095-004](#) for guidance on how to use Insight 2, a PC-based tool to view and configure actuator settings.

1. Launch Insight 2 and select the username assigned to you for the Privilege Level. In the Password field, enter the appropriate password. Then click on the Login button.

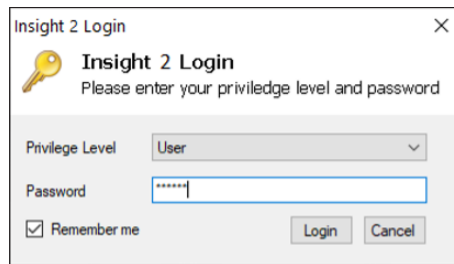


2. Insight 2 communicates with the actuator using Bluetooth. To enable discovery mode on the actuator, refer to the IQ3/IQT3 full configuration manual [PUB002-040](#).
3. With the actuator now set to Bluetooth discoverable, in Insight 2 go to Connection -> Discover Device.

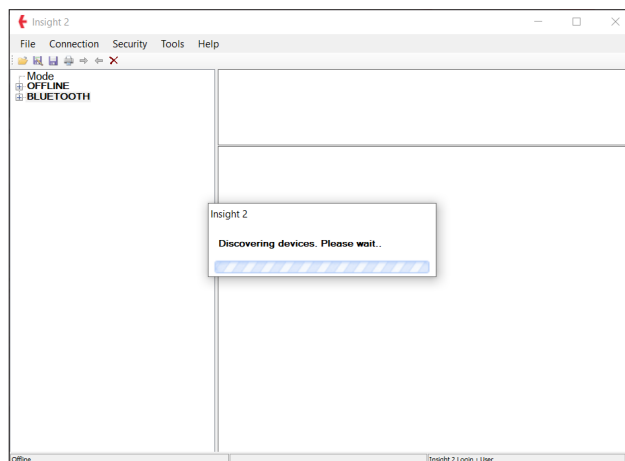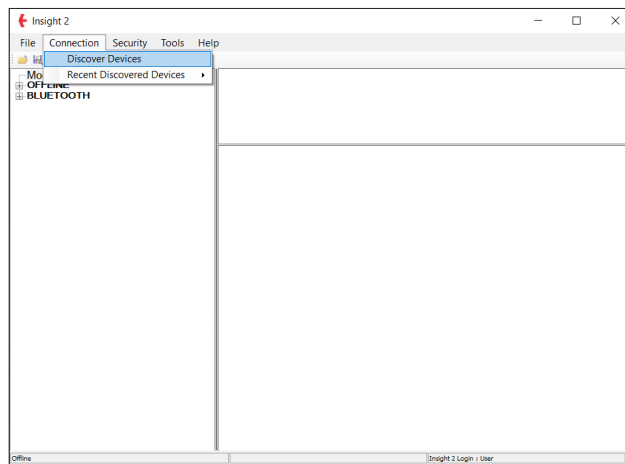


4 Configuration of the EtherNet/IP option card


4. In the left panel a list of discovered actuators appears. Right click on an actuator and click Connect. In this example, an IQ3 actuator fitted with an EtherNet/IP option card is used.

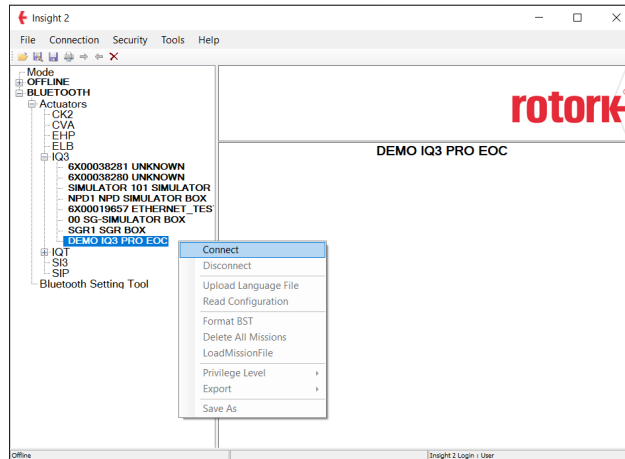

5. If connection to the actuator is successful, an actuator login prompt will appear. Set the appropriate privilege level and enter the corresponding password. Then click on the Login button.

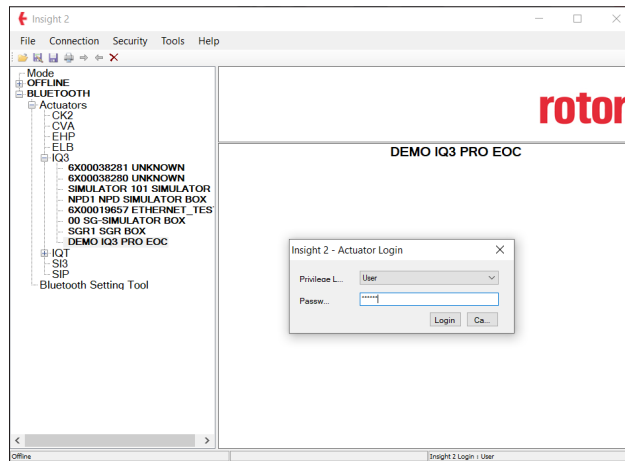


6. Insight 2 fetches the online configuration.

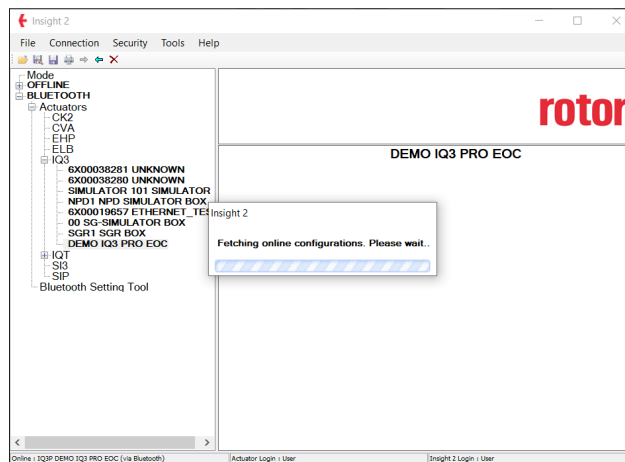


4 Configuration of the EtherNet/IP option card



- Once the configuration is retrieved from the actuator, expand Option Cards and select EtherNet/IP.

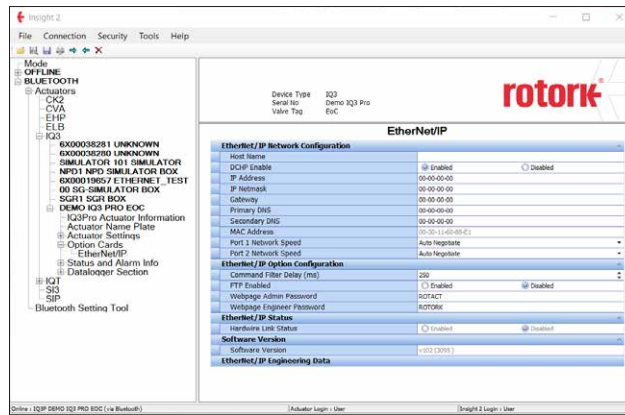

- To modify the network settings, type in the new settings, then click on the Send Configuration icon (blue arrow pointing right). The IP settings must be entered in hexadecimal format, separated by hyphens. For example, 13.107.64.5 is 0D-6B-40-05 in hexadecimal format.

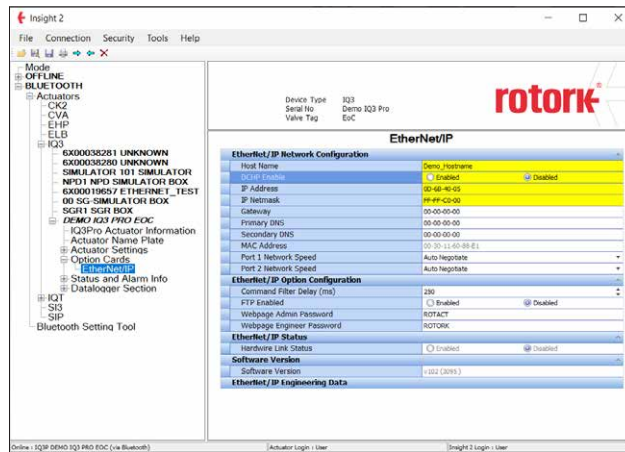


- When sending configurations to the actuator, a warning dialog appears that current configurations of the actuator will be overwritten. Click on the Yes button to continue. If the configurations have successfully been modified, another dialog appears to confirm that configuration data has been sent to the actuator successfully.

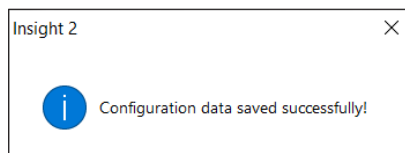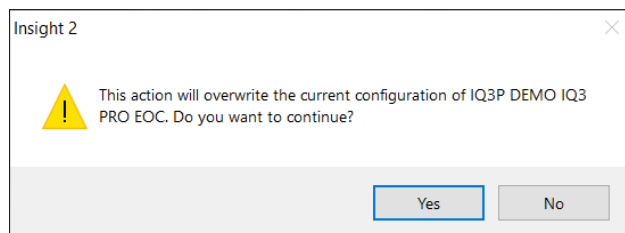

4 Configuration of the EtherNet/IP option card

4.6 Configuring the Option Card using the Rockwell Automation AOP

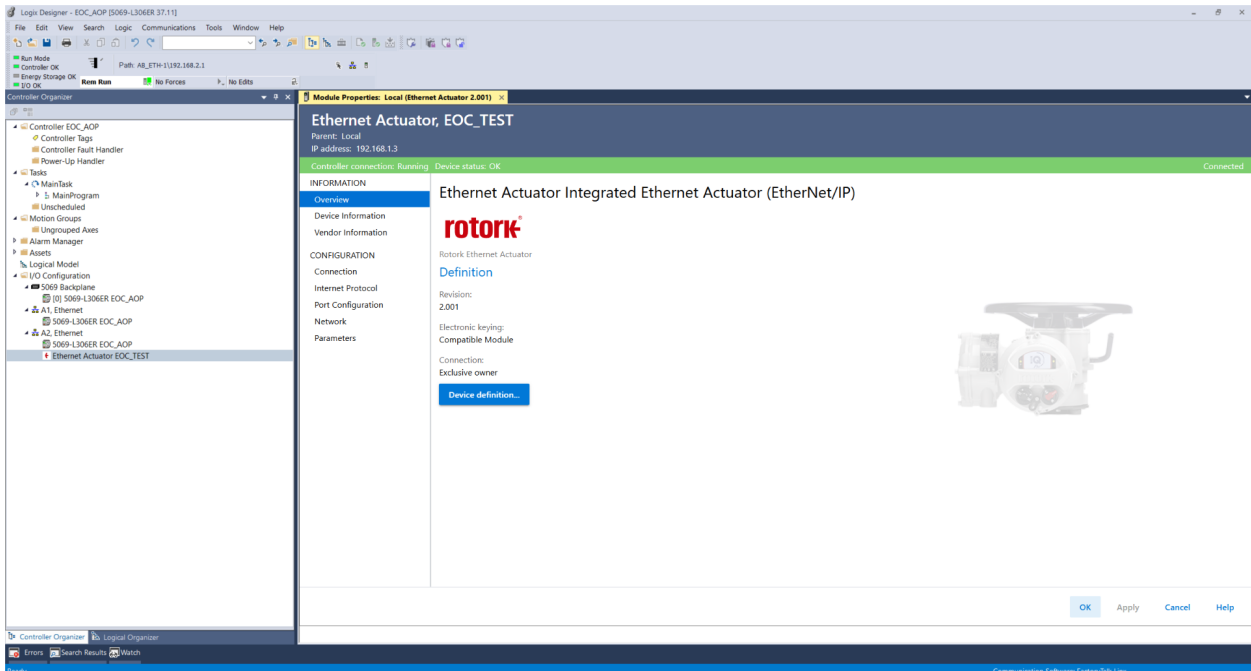

Rockwell Automation's Add-On Profiles (AOPs) enable the seamless integration of third-party EtherNet/IP devices, such as Rotork IQ3 Pro actuators with the Rotork EtherNet/IP option card installed, into Studio 5000 Logix Designer. AOPs allow these devices to appear as native modules, simplifying configuration and reducing engineering time.

The benefits of using AOP include:

- Simplified configuration: Automatic tag generation and validation in Studio 5000.
- Faster commissioning: Eliminates manual byte mapping and custom logic.
- Improved diagnostics: Built-in status and configuration visibility.
- Enhanced interoperability: ODVA-certified EtherNet/IP compliance for consistent workflows.
- Industry 4.0 Ready: Supports predictive maintenance and cloud integration for smarter operations.

An AOP is available for the Rotork IQ3 Pro actuators with the Rotork EtherNet/IP option card installed with **firmware version v105**. The AOP installation files can be downloaded from the Rotork website [here](#). Installation and setup instructions are available through Rockwell Automation's official AOP installation documentation. Please refer to these resources before commissioning.

For more information about Rockwell Automation systems and AOP, please refer to the Rockwell Automation website.

4.6.1 EDS & AOP Firmware Version Compatibility


Ethernet Option Card	EDS version	AOP version
v103	1.01	N/A
v104	1.04	N/A
v105	2.01	1.01.06

4 Configuration of the EtherNet/IP option card


4.6.2 Identifying the Firmware Version of the Ethernet Option Card

Using the Rotork Bluetooth® Setting Tool Pro, follow these steps on your IQ3 Pro or IQT3 Pro actuator to identify the firmware version of the Ethernet option card fitted.


From the home screen select **Assets**.

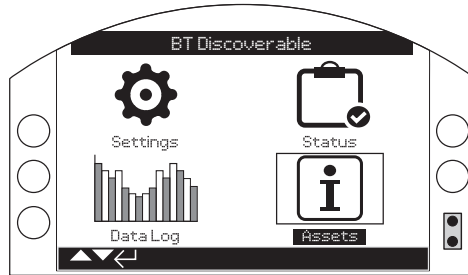


From the **Assets** menu, select **Actuator**.

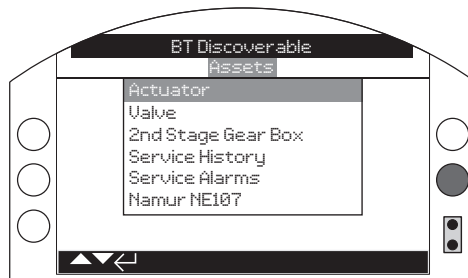

From the **Actuator** menu, select **Actuator Opt Build**

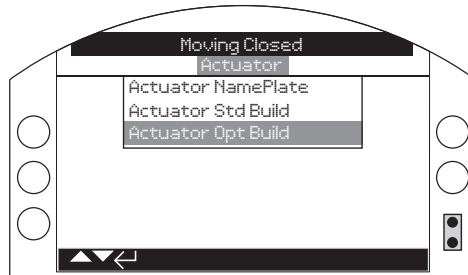

The Ethernet Option Card firmware version will be visible in the list. You may need to scroll down if the actuator has other options fitted; the **Type** will be listed as **EtherNet/IP**.

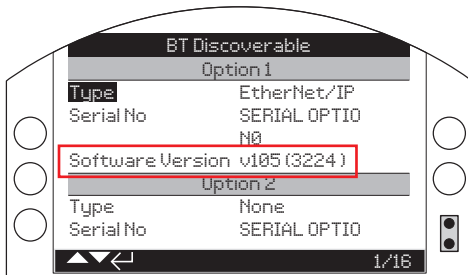

The software (firmware) version can also be viewed via the web interface, see section 4.4.2.

5 Diagnostics

5.1 EtherNet/IP status attribute table

The Status Attribute (#5) in the CIP Identity Object (0x01) is used by the option card as a basic diagnostics tool.

The following table describes the conditions required for each bit of the Status Attribute to be set by the option card.

Bit(s)	Description
0	Module owned.
1 – 3	Reserved.
4 – 7	Extended device status:
	Value Meaning
	0000b Unknown.
	0010b Faulted I/O connection.
	0011b No I/O connection established.
	0100b Non-volatile configuration bad.
	0101b Major fault.
	0110b Connection in Run mode.
0111b Connection in Idle mode.	
(other)	Reserved.
8	Minor recoverable fault: Set when Instance #18 NAMUROutOfSpecAlarmData and Instance #20 NAMURMaintenanceAlarmData in the CIP Parameter Object (0x0F) have non-zero values.
9	Reserved.
10	Major recoverable fault: Set when Instance #17 NAMURFailureAlarmData and Instance #19 NAMURFunctionCheckAlarmData in the CIP Parameter Object (0x0F) have non-zero values. Also set when Byte0_CANFault bit is set in Instance #24 NetworkStatus1 in the CIP Parameter Object (0x0F), which indicates that there is a communication fault between the actuator and the option card.
11 – 15	Reserved.

6 Parameters

6.1 EtherNet/IP parameter overview table

The table below provides an overview of the instances available in the CIP Parameter Object (0x0F) of the option card. See Section 6.3 for bitfield descriptions, 6.4 for enumeration descriptions, and refer to [PUB002-040](#) for detailed parameter descriptions, where required. See Section 6.5 for descriptions of the attributes available for each parameter instance.

Index	Data Name	Data Type	Data Size (octets)	Data Access	Description
1	StatusData1	Bitfield	2	Read	StatusData1 to StatusData4: Actuator general status signals.
2	StatusData2	Bitfield	2	Read	
3	StatusData3	Bitfield	2	Read	
4	StatusData4	Bitfield	2	Read	
5	AlarmData1	Bitfield	2	Read	AlarmData1 to AlarmData4: Actuator general Alarm signals.
6	AlarmData2	Bitfield	2	Read	
7	AlarmData3	Bitfield	2	Read	
8	AlarmData4	Bitfield	2	Read	
9	DigitalControlIndication	Bitfield	2	Read	Digital control: This is a read only version of the digital control parameter (index 22).
10	DesiredPositionIndication	Unsigned int	2	Read	Position control: This is a read only version of the position control parameter (index 23). Value in 100ths of %, range 0 (0.00%) to 10000 (100.00%).
					Multiport/Multiset actuator: Value in 10s of port number. Range 10 (port 1) to 160 (port 16).
11	Position	Unsigned int	2	Read	Position feedback in 100ths of a %. Range 0 (0.00%) to 10000 (100.00%). Will calibrate to limited range position if configured.
12	TorqueOrThrust	Signed int	2	Read	Instantaneous torque in 10ths of a %. Range 0 (0.0%) to 1200 (120.0%).
13	Temperature	Signed int	2	Read	Internal temperature of the actuator: Signed value with units of 0.1 degrees Celsius.
14	Analogueinput1	Unsigned int	2	Read	Analogue input 1: Only applicable to actuators capable of additional analogue input cards. Range 0 (0.00%) to 10000 (100.00%).
15	Analogueinput2	Unsigned int	2	Read	Analogue input 2: only applicable to actuators capable of additional analogue input cards. Range 0 (0.00%) to 10000 (100.00%).
16	NAMURAlarmDataAllMasked	Bitfield	4	Read	NAMUR 107 status and alarm data for all four failure levels (as masked in parameters 34 to 37). Data bits are defined in the Bitfields table, and more details can be found in publication PUB002-040 .
17	NAMURFailureAlarmData	Bitfield	4	Read	NAMUR 107 status and alarm data for Failure only (as masked in parameter NAMURFailureDataMask, no. 34). Data bits are defined in the Bitfields table, and more details can be found in publication PUB002-040 .
18	NAMUROutOfSpecAlarmData	Bitfield	4	Read	NAMUR 107 status and alarm data for out of specification only (as masked in parameter NAMUROutOfSpecDataMask, no. 35). Data bits are defined in the Bitfields table, and more details can be found in publication PUB002-040 .
19	NAMURFunctionCheckAlarmData	Bitfield	4	Read	NAMUR 107 status and alarm data for function check only (as masked in parameter NAMURFunctionCheckDataMask, no. 36). Data bits are defined in the Bitfields table, and more details can be found in publication PUB002-040 .
20	NAMURMaintenanceAlarmData	Bitfield	4	Read	NAMUR 107 status and alarm data for Maintenance only (as masked in parameter NAMURMaintenanceDataMask, no.37). Data bits are defined in the Bitfields table, and more details can be found in publication PUB002-040 .
21	NAMURStatusAlarmData	Bitfield	4	Read	NAMUR 107 all status and alarm data (regardless of the masks in parameters 34 to 37). Data bits are defined in the Bitfields table, and more details can be found in publication PUB002-040 .
22	DigitalControl	Bitfield	2	Read / Write	Digital control: Digital movement command register for the actuator. Writing here will cause movement if the actuator is available for remote control.
23	DesiredPosition	Unsigned int	2	Read / Write	Position control: Positional command register for the actuator. Value in 100ths of %. Range 0 (0.00%) to 10000 (100.00%). Writing here will cause movement if the actuator is available for remote control and the PositionEnable bit is set in DigitalControl (index 22).
					Multiport/Multiset actuator: Value in 10s of port number. Range 10 (port 1) to 160 (port 16).
24	NetworkStatus1	Bitfield	2	Read	NetworkStatus1 to NetworkStatus4: Option card status. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
25	NetworkStatus2	Bitfield	2	Read	
26	NetworkStatus3	Bitfield	2	Read	
27	NetworkStatus4	Bitfield	2	Read	
28	MultiportStatus1	Bitfield	2	Read	Multiport status. See Bitfields table for detailed description. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
29	MultiportStatus2	Bitfield	2	Read	
30	MultiportStatus3	Bitfield	2	Read	
31	MultiportStatus4	Bitfield	2	Read	
32	MultiportNearestPort	Unsigned int	2	Read	Multiport Nearest Port: indicates the port nearest to the current position. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
33	SetResetRelays	Bitfield	4	Read / Write	Relay control: 32-bit register for controlling the output of the relays. Bits 0 to 8, sets relays 1 to 9 respectively (value 1 sets relay, value 0 does nothing). Bits 9 to 17, resets relays 1 to 9 respectively (value 1 resets relay, value 0 does nothing).
34	NAMURFailureDataMask	Bitfield	4	Read / Write	NAMUR 107 Mask Configuration for Failure Level: Data bits are defined in the Bitfields table and more details can be found in publication PUB002-040 .
35	NAMUROutOfSpecDataMask	Bitfield	4	Read / Write	NAMUR 107 Mask Configuration for Out Of Specification Level: Data bits are defined in the Bitfields table and more details can be found in publication PUB002-040 .
36	NAMURFunctionCheckDataMask	Bitfield	4	Read / Write	NAMUR 107 Mask Configuration for Function Check Level: Data bits are defined in the Bitfields table and more details can be found in publication PUB002-040 .
37	NAMURMaintenanceDataMask	Bitfield	4	Read / Write	NAMUR 107 Mask Configuration for Maintenance Level: Data bits are defined in the Bitfields table and more details can be found in publication PUB002-040 .
38	LossOfCommsTimeout	Unsigned int	2	Read / Write	LossOfCommsTimeoutConfiguration: Configuration for action on loss of signal timeout. Time, in milliseconds, after communications with the option card have been lost, that the configured action on loss of signal will take place.
39	ActionOnLossOfComms	Enumeration	1	Read / Write	ActionOnLossOfComms: Configuration for action on loss of signal. Action to be performed when communication loss occurs and the time set in LossOfCommsTimeout (parameter 38) has elapsed. Values: 0 – No action 1 – Open 3 – Close 5 – Stop 7 – Go to position
40	CommsLostPosition	Unsigned int	2	Read / Write	CommsLostPosition: Configuration for the position that the actuator should move to when comms lost occurs, and the action (parameter ActionOnLossOfComms, no. 39) is set to Go To position. Range 0 (0.00%) to 10000 (100.00%).

Note: Indices 28 to 31 are reserved and 324 onwards are not available on v103 firmware

6 Parameters

Index	Data Name	Data Type	Data Size (octets)	Data Access	Description
41	FunctionOfS1	Enumeration	1	Read / Write	FunctionOfS1 to FunctionOfS12: If fitted, configuration for relays 1 to 12 action. See Enumerations table for values (FunctionOfS1 to S12). Relays S1 to S4 are supplied with an actuator by default. Relays S5 to S12 are optional. They can be configured to provide communication to external devices. For example, they can signal that a partial stroke is active or 24V power supply is lost. Please refer to PUB002-040 for details.
42	FunctionOfS2	Enumeration	1	Read / Write	
43	FunctionOfS3	Enumeration	1	Read / Write	
44	FunctionOfS4	Enumeration	1	Read / Write	
45	FunctionOfS5	Enumeration	1	Read / Write	
46	FunctionOfS6	Enumeration	1	Read / Write	
47	FunctionOfS7	Enumeration	1	Read / Write	
48	FunctionOfS8	Enumeration	1	Read / Write	
49	FunctionOfS9	Enumeration	1	Read / Write	
50	FunctionOfS10	Enumeration	1	Read / Write	
51	FunctionOfS11	Enumeration	1	Read / Write	
52	FunctionOfS12	Enumeration	1	Read / Write	
53	ContactTypeS1	Enumeration	1	Read / Write	ContactTypeS1 to ContactTypeS12: If fitted, configuration for relays 1 to 12 contact type. Values: 0 – Normally Closed contact 1 – Normally Open contact
54	ContactTypeS2	Enumeration	1	Read / Write	
55	ContactTypeS3	Enumeration	1	Read / Write	
56	ContactTypeS4	Enumeration	1	Read / Write	
57	ContactTypeS5	Enumeration	1	Read / Write	
58	ContactTypeS6	Enumeration	1	Read / Write	
59	ContactTypeS7	Enumeration	1	Read / Write	
60	ContactTypeS8	Enumeration	1	Read / Write	
61	ContactTypeS9	Enumeration	1	Read / Write	
62	ContactTypeS10	Enumeration	1	Read / Write	
63	ContactTypeS11	Enumeration	1	Read / Write	
64	ContactTypeS12	Enumeration	1	Read / Write	
65	PositionTripS1	Unsigned int	2	Read / Write	PositionTripS1 to PositionTripS12: If fitted, configuration for relays 1 to 12 when function type 'intermediate position' is selected. Range 0 (0.0%) to 1000 (100.0%).
66	PositionTripS2	Unsigned int	2	Read / Write	
67	PositionTripS3	Unsigned int	2	Read / Write	
68	PositionTripS4	Unsigned int	2	Read / Write	
69	PositionTripS5	Unsigned int	2	Read / Write	
70	PositionTripS6	Unsigned int	2	Read / Write	
62	ContactTypeS10	Enumeration	1	Read / Write	
63	ContactTypeS11	Enumeration	1	Read / Write	
64	ContactTypeS12	Enumeration	1	Read / Write	
65	PositionTripS1	Unsigned int	2	Read / Write	
66	PositionTripS2	Unsigned int	2	Read / Write	
67	PositionTripS3	Unsigned int	2	Read / Write	
68	PositionTripS4	Unsigned int	2	Read / Write	
69	PositionTripS5	Unsigned int	2	Read / Write	
70	PositionTripS6	Unsigned int	2	Read / Write	
71	PositionTripS7	Unsigned int	2	Read / Write	
72	PositionTripS8	Unsigned int	2	Read / Write	
73	PositionTripS9	Unsigned int	2	Read / Write	
74	PositionTripS10	Unsigned int	2	Read / Write	
75	PositionTripS11	Unsigned int	2	Read / Write	
76	PositionTripS12	Unsigned int	2	Read / Write	
77	FTPEnabled	Enumeration	1	Read	FTPEnabled: Indicates whether File Transfer Protocol is enabled on the option card.
78	DefaultHardWireLinkEnabled	Enumeration	1	Read	DefaultHardWireLinkEnabled: Indicates whether the default hard wire link is inserted in the option card during power-up or firmware reset. Value 0 indicates default link not present, Value 1 indicates default link in place. If the default link is inserted, option card configurations are set to default values.
79	NetworkUptime	Unsigned int	4	Read	NetworkUptime: The time, in units of 0.25s, since the last reset of the option card.
80	FieldInterfaceType	Enumeration	1	Read	FieldInterfaceType: Indicates which Ethernet industrial protocol is in use. Value is fixed to 52 for EtherNet/IP.
81	OptionNumber	Unsigned int	2	Read	OptionNumber: Internal inter-board communications reference (CAN slot number).
82	CloseContactorCount	Unsigned int	4	Read	CloseContactorCount: Indicates the number of times the actuator has been operated in the Close direction.
83	OpenContactorCount	Unsigned int	4	Read	OpenContactorCount: Indicates the number of times the actuator has been operated in the Open direction.
84	NumberOfContactorSwitches	Unsigned int	4	Read	NumberOfContactorSwitches: Indicates the number of times the actuator has been operated in either direction.
85	ClosingTorqueAt0Pct	Unsigned int	2	Read	ClosingTorqueAt0Pct to ClosingTorqueAt100Pct: Instantaneous Torque log - closing. Indicates the average value of the closing torque at each percentage position. Range 0 (0%) to 120 (120%).
86	ClosingTorqueAt1Pct	Unsigned int	2	Read	
87	ClosingTorqueAt2Pct	Unsigned int	2	Read	
88	ClosingTorqueAt3Pct	Unsigned int	2	Read	
89	ClosingTorqueAt4Pct	Unsigned int	2	Read	
90	ClosingTorqueAt5Pct	Unsigned int	2	Read	
91	ClosingTorqueAt6Pct	Unsigned int	2	Read	
92	ClosingTorqueAt7Pct	Unsigned int	2	Read	
93	ClosingTorqueAt8Pct	Unsigned int	2	Read	
94	ClosingTorqueAt9Pct	Unsigned int	2	Read	
95	ClosingTorqueAt10Pct	Unsigned int	2	Read	
96	ClosingTorqueAt11Pct	Unsigned int	2	Read	
97	ClosingTorqueAt12Pct	Unsigned int	2	Read	
98	ClosingTorqueAt13Pct	Unsigned int	2	Read	
99	ClosingTorqueAt14Pct	Unsigned int	2	Read	
100	ClosingTorqueAt15Pct	Unsigned int	2	Read	
101	ClosingTorqueAt16Pct	Unsigned int	2	Read	
102	ClosingTorqueAt17Pct	Unsigned int	2	Read	
103	ClosingTorqueAt18Pct	Unsigned int	2	Read	
104	ClosingTorqueAt19Pct	Unsigned int	2	Read	
105	ClosingTorqueAt20Pct	Unsigned int	2	Read	
106	ClosingTorqueAt21Pct	Unsigned int	2	Read	
107	ClosingTorqueAt22Pct	Unsigned int	2	Read	
108	ClosingTorqueAt23Pct	Unsigned int	2	Read	

6 Parameters

Index	Data Name	Data Type	Data Size (octets)	Data Access	Description	
109	ClosingTorqueAt24Pct	Unsigned int	2	Read	ClosingTorqueAt0Pct to ClosingTorqueAt100Pct: Instantaneous Torque log - closing. Indicates the average value of the closing torque at each percentage position. Range 0 (0%) to 120 (120%).	
110	ClosingTorqueAt25Pct	Unsigned int	2	Read		
111	ClosingTorqueAt26Pct	Unsigned int	2	Read		
112	ClosingTorqueAt27Pct	Unsigned int	2	Read		
113	ClosingTorqueAt28Pct	Unsigned int	2	Read		
114	ClosingTorqueAt29Pct	Unsigned int	2	Read		
115	ClosingTorqueAt30Pct	Unsigned int	2	Read		
116	ClosingTorqueAt31Pct	Unsigned int	2	Read		
117	ClosingTorqueAt32Pct	Unsigned int	2	Read		
118	ClosingTorqueAt33Pct	Unsigned int	2	Read		
119	ClosingTorqueAt34Pct	Unsigned int	2	Read		
120	ClosingTorqueAt35Pct	Unsigned int	2	Read		
121	ClosingTorqueAt36Pct	Unsigned int	2	Read		
122	ClosingTorqueAt37Pct	Unsigned int	2	Read		
123	ClosingTorqueAt38Pct	Unsigned int	2	Read		
124	ClosingTorqueAt39Pct	Unsigned int	2	Read		
125	ClosingTorqueAt40Pct	Unsigned int	2	Read		
126	ClosingTorqueAt41Pct	Unsigned int	2	Read		
127	ClosingTorqueAt42Pct	Unsigned int	2	Read		
128	ClosingTorqueAt43Pct	Unsigned int	2	Read		
129	ClosingTorqueAt44Pct	Unsigned int	2	Read		
130	ClosingTorqueAt45Pct	Unsigned int	2	Read		
131	ClosingTorqueAt46Pct	Unsigned int	2	Read		
132	ClosingTorqueAt47Pct	Unsigned int	2	Read		
133	ClosingTorqueAt48Pct	Unsigned int	2	Read		
134	ClosingTorqueAt49Pct	Unsigned int	2	Read		
135	ClosingTorqueAt50Pct	Unsigned int	2	Read		
136	ClosingTorqueAt51Pct	Unsigned int	2	Read		
137	ClosingTorqueAt52Pct	Unsigned int	2	Read		
138	ClosingTorqueAt53Pct	Unsigned int	2	Read		
139	ClosingTorqueAt54Pct	Unsigned int	2	Read		
140	ClosingTorqueAt55Pct	Unsigned int	2	Read		
141	ClosingTorqueAt56Pct	Unsigned int	2	Read		
142	ClosingTorqueAt57Pct	Unsigned int	2	Read		
143	ClosingTorqueAt58Pct	Unsigned int	2	Read		
144	ClosingTorqueAt59Pct	Unsigned int	2	Read		
145	ClosingTorqueAt60Pct	Unsigned int	2	Read		
146	ClosingTorqueAt61Pct	Unsigned int	2	Read		
147	ClosingTorqueAt62Pct	Unsigned int	2	Read		
148	ClosingTorqueAt63Pct	Unsigned int	2	Read		
149	ClosingTorqueAt64Pct	Unsigned int	2	Read		
150	ClosingTorqueAt65Pct	Unsigned int	2	Read		
151	ClosingTorqueAt66Pct	Unsigned int	2	Read		
152	ClosingTorqueAt67Pct	Unsigned int	2	Read		
153	ClosingTorqueAt68Pct	Unsigned int	2	Read		
154	ClosingTorqueAt69Pct	Unsigned int	2	Read		
155	ClosingTorqueAt70Pct	Unsigned int	2	Read		
156	ClosingTorqueAt71Pct	Unsigned int	2	Read		
157	ClosingTorqueAt72Pct	Unsigned int	2	Read		
158	ClosingTorqueAt73Pct	Unsigned int	2	Read		
159	ClosingTorqueAt74Pct	Unsigned int	2	Read		
160	ClosingTorqueAt75Pct	Unsigned int	2	Read		
161	ClosingTorqueAt76Pct	Unsigned int	2	Read		
162	ClosingTorqueAt77Pct	Unsigned int	2	Read		
163	ClosingTorqueAt78Pct	Unsigned int	2	Read		
164	ClosingTorqueAt79Pct	Unsigned int	2	Read		
165	ClosingTorqueAt80Pct	Unsigned int	2	Read		
166	ClosingTorqueAt81Pct	Unsigned int	2	Read		
167	ClosingTorqueAt82Pct	Unsigned int	2	Read		
168	ClosingTorqueAt83Pct	Unsigned int	2	Read		
169	ClosingTorqueAt84Pct	Unsigned int	2	Read		
170	ClosingTorqueAt85Pct	Unsigned int	2	Read		
171	ClosingTorqueAt86Pct	Unsigned int	2	Read		
172	ClosingTorqueAt87Pct	Unsigned int	2	Read		
173	ClosingTorqueAt88Pct	Unsigned int	2	Read		
174	ClosingTorqueAt89Pct	Unsigned int	2	Read		
175	ClosingTorqueAt90Pct	Unsigned int	2	Read		
176	ClosingTorqueAt91Pct	Unsigned int	2	Read		
177	ClosingTorqueAt92Pct	Unsigned int	2	Read		
178	ClosingTorqueAt93Pct	Unsigned int	2	Read		
179	ClosingTorqueAt94Pct	Unsigned int	2	Read		
180	ClosingTorqueAt95Pct	Unsigned int	2	Read		
181	ClosingTorqueAt96Pct	Unsigned int	2	Read		
182	ClosingTorqueAt97Pct	Unsigned int	2	Read		
183	ClosingTorqueAt98Pct	Unsigned int	2	Read		
184	ClosingTorqueAt99Pct	Unsigned int	2	Read		
185	ClosingTorqueAt100Pct	Unsigned int	2	Read		
186	OpeningTorqueAt0Pct	Unsigned int	2	Read		OpeningTorqueAt0Pct to OpeningTorqueAt100Pct: Instantaneous Torque log – opening. Indicates the average value of the opening torque at each percentage position. Range 0 (0%) to 120 (120%).
187	OpeningTorqueAt1Pct	Unsigned int	2	Read		
188	OpeningTorqueAt2Pct	Unsigned int	2	Read		
189	OpeningTorqueAt3Pct	Unsigned int	2	Read		
190	OpeningTorqueAt4Pct	Unsigned int	2	Read		
191	OpeningTorqueAt5Pct	Unsigned int	2	Read		

6 Parameters

Index	Data Name	Data Type	Data Size (octets)	Data Access	Description
192	OpeningTorqueAt6Pct	Unsigned int	2	Read	OpeningTorqueAt0Pct to OpeningTorqueAt100Pct: Instantaneous Torque log – opening. Indicates the average value of the opening torque at each percentage position. Range 0 (0%) to 120 (120%).
193	OpeningTorqueAt7Pct	Unsigned int	2	Read	
194	OpeningTorqueAt8Pct	Unsigned int	2	Read	
195	OpeningTorqueAt9Pct	Unsigned int	2	Read	
196	OpeningTorqueAt10Pct	Unsigned int	2	Read	
197	OpeningTorqueAt11Pct	Unsigned int	2	Read	
198	OpeningTorqueAt12Pct	Unsigned int	2	Read	
199	OpeningTorqueAt13Pct	Unsigned int	2	Read	
200	OpeningTorqueAt14Pct	Unsigned int	2	Read	
201	OpeningTorqueAt15Pct	Unsigned int	2	Read	
202	OpeningTorqueAt16Pct	Unsigned int	2	Read	
203	OpeningTorqueAt17Pct	Unsigned int	2	Read	
204	OpeningTorqueAt18Pct	Unsigned int	2	Read	
205	OpeningTorqueAt19Pct	Unsigned int	2	Read	
206	OpeningTorqueAt20Pct	Unsigned int	2	Read	
207	OpeningTorqueAt21Pct	Unsigned int	2	Read	
208	OpeningTorqueAt22Pct	Unsigned int	2	Read	
209	OpeningTorqueAt23Pct	Unsigned int	2	Read	
210	OpeningTorqueAt24Pct	Unsigned int	2	Read	
211	OpeningTorqueAt25Pct	Unsigned int	2	Read	
212	OpeningTorqueAt26Pct	Unsigned int	2	Read	
213	OpeningTorqueAt27Pct	Unsigned int	2	Read	
214	OpeningTorqueAt28Pct	Unsigned int	2	Read	
215	OpeningTorqueAt29Pct	Unsigned int	2	Read	
216	OpeningTorqueAt30Pct	Unsigned int	2	Read	
217	OpeningTorqueAt31Pct	Unsigned int	2	Read	
218	OpeningTorqueAt32Pct	Unsigned int	2	Read	
219	OpeningTorqueAt33Pct	Unsigned int	2	Read	
220	OpeningTorqueAt34Pct	Unsigned int	2	Read	
221	OpeningTorqueAt35Pct	Unsigned int	2	Read	
222	OpeningTorqueAt36Pct	Unsigned int	2	Read	
223	OpeningTorqueAt37Pct	Unsigned int	2	Read	
224	OpeningTorqueAt38Pct	Unsigned int	2	Read	
225	OpeningTorqueAt39Pct	Unsigned int	2	Read	
226	OpeningTorqueAt40Pct	Unsigned int	2	Read	
227	OpeningTorqueAt41Pct	Unsigned int	2	Read	
228	OpeningTorqueAt42Pct	Unsigned int	2	Read	
229	OpeningTorqueAt43Pct	Unsigned int	2	Read	
230	OpeningTorqueAt44Pct	Unsigned int	2	Read	
231	OpeningTorqueAt45Pct	Unsigned int	2	Read	
232	OpeningTorqueAt46Pct	Unsigned int	2	Read	
233	OpeningTorqueAt47Pct	Unsigned int	2	Read	
234	OpeningTorqueAt48Pct	Unsigned int	2	Read	
235	OpeningTorqueAt49Pct	Unsigned int	2	Read	
236	OpeningTorqueAt50Pct	Unsigned int	2	Read	
237	OpeningTorqueAt51Pct	Unsigned int	2	Read	
238	OpeningTorqueAt52Pct	Unsigned int	2	Read	
239	OpeningTorqueAt53Pct	Unsigned int	2	Read	
240	OpeningTorqueAt54Pct	Unsigned int	2	Read	
241	OpeningTorqueAt55Pct	Unsigned int	2	Read	
242	OpeningTorqueAt56Pct	Unsigned int	2	Read	
243	OpeningTorqueAt57Pct	Unsigned int	2	Read	
244	OpeningTorqueAt58Pct	Unsigned int	2	Read	
245	OpeningTorqueAt59Pct	Unsigned int	2	Read	
246	OpeningTorqueAt60Pct	Unsigned int	2	Read	
247	OpeningTorqueAt61Pct	Unsigned int	2	Read	
248	OpeningTorqueAt62Pct	Unsigned int	2	Read	
249	OpeningTorqueAt63Pct	Unsigned int	2	Read	
250	OpeningTorqueAt64Pct	Unsigned int	2	Read	
251	OpeningTorqueAt65Pct	Unsigned int	2	Read	
252	OpeningTorqueAt66Pct	Unsigned int	2	Read	
253	OpeningTorqueAt67Pct	Unsigned int	2	Read	
254	OpeningTorqueAt68Pct	Unsigned int	2	Read	
255	OpeningTorqueAt69Pct	Unsigned int	2	Read	
256	OpeningTorqueAt70Pct	Unsigned int	2	Read	
257	OpeningTorqueAt71Pct	Unsigned int	2	Read	
258	OpeningTorqueAt72Pct	Unsigned int	2	Read	
259	OpeningTorqueAt73Pct	Unsigned int	2	Read	
260	OpeningTorqueAt74Pct	Unsigned int	2	Read	
261	OpeningTorqueAt75Pct	Unsigned int	2	Read	
262	OpeningTorqueAt76Pct	Unsigned int	2	Read	
263	OpeningTorqueAt77Pct	Unsigned int	2	Read	
264	OpeningTorqueAt78Pct	Unsigned int	2	Read	
265	OpeningTorqueAt79Pct	Unsigned int	2	Read	
266	OpeningTorqueAt80Pct	Unsigned int	2	Read	
267	OpeningTorqueAt81Pct	Unsigned int	2	Read	
268	OpeningTorqueAt82Pct	Unsigned int	2	Read	
269	OpeningTorqueAt83Pct	Unsigned int	2	Read	
270	OpeningTorqueAt84Pct	Unsigned int	2	Read	
271	OpeningTorqueAt85Pct	Unsigned int	2	Read	
272	OpeningTorqueAt86Pct	Unsigned int	2	Read	
273	OpeningTorqueAt87Pct	Unsigned int	2	Read	
274	OpeningTorqueAt88Pct	Unsigned int	2	Read	

6 Parameters

Index	Data Name	Data Type	Data Size (octets)	Data Access	Description	
275	OpeningTorqueAt89Pct	Unsigned int	2	Read	OpeningTorqueAt0Pct to OpeningTorqueAt100Pct: Instantaneous Torque log – opening. Indicates the average value of the opening torque at each percentage position. Range 0 (0%) to 120 (120%).	
276	OpeningTorqueAt90Pct	Unsigned int	2	Read		
277	OpeningTorqueAt91Pct	Unsigned int	2	Read		
278	OpeningTorqueAt92Pct	Unsigned int	2	Read		
279	OpeningTorqueAt93Pct	Unsigned int	2	Read		
280	OpeningTorqueAt94Pct	Unsigned int	2	Read		
281	OpeningTorqueAt95Pct	Unsigned int	2	Read		
282	OpeningTorqueAt96Pct	Unsigned int	2	Read		
283	OpeningTorqueAt97Pct	Unsigned int	2	Read		
284	OpeningTorqueAt98Pct	Unsigned int	2	Read		
285	OpeningTorqueAt99Pct	Unsigned int	2	Read		
286	OpeningTorqueAt100Pct	Unsigned int	2	Read		
287	ActuatorTag	Char	32	Read / Write		ActuatorTag: The customers Valve Tag can be entered in here for reference.
288	ActuatorType	Enumeration	1	Read		Actuator Type: Value 26 – IQ3Pro, value 27 – IQ3TPro.
289	ActuatorSerialNumber	Char	16	Read	ActuatorSerialNumber: Manufacturer data. Actuator serial number.	
290	ControllerSerialNumber	Char	24	Read	ControllerSerialNumber: Manufacturer data. Serial number for actuator main controller board.	
291	UISerialNumber	Char	24	Read	UISerialNumber: Manufacturer data. Serial Number for user interface board/local controls.	
292	PositionSensorSerialNumber	Char	24	Read	PositionSensorSerialNumber: Manufacturer data. Serial number for the position sensor.	
293	DCPowerModuleSerialNumber	Char	24	Read	DCPowerModuleSerialNumber: Manufacturer data. Serial number for the DC power board.	
294	PowerModuleSerialNumber	Char	24	Read	PowerModuleSerialNumber: Manufacturer data. Serial number for the power module board.	
295	SolidStateStarterModuleSerialNumber	Char	24	Read	SolidStateStarterModuleSerialNumber: Manufacturer data. Serial Number for the solid-state starter module board.	
296	Option1SerialNumber	Char	24	Read	Option1SerialNumber to Option4SerialNumber: Manufacturer data. Serial Number for options 1 to 4 - if fitted.	
297	Option2SerialNumber	Char	24	Read		
298	Option3SerialNumber	Char	24	Read		
299	Option4SerialNumber	Char	24	Read		
300	AssetIDList1	Unsigned int	2	Read	AssetIDList1to AssetIDList10: Lists the asset IDs in the system. This data is used internally.	
301	AssetIDList2	Unsigned int	2	Read		
302	AssetIDList3	Unsigned int	2	Read		
303	AssetIDList4	Unsigned int	2	Read		
304	AssetIDList5	Unsigned int	2	Read		
305	AssetIDList6	Unsigned int	2	Read		
306	AssetIDList7	Unsigned int	2	Read		
307	AssetIDList8	Unsigned int	2	Read		
308	AssetIDList9	Unsigned int	2	Read		
309	AssetIDList10	Unsigned int	2	Read		
310	Asset1SoftwareVersion	Char	12	Read	Asset1SoftwareVersion to Asset10SoftwareVersion: Software versions for the assets (main actuator board, user interface board, option card, etc) in the actuator. Each software version is max 12 characters long, which is the version number followed by build number. For example, "v102(3145)".	
311	Asset2SoftwareVersion	Char	12	Read		
312	Asset3SoftwareVersion	Char	12	Read		
313	Asset4SoftwareVersion	Char	12	Read		
314	Asset5SoftwareVersion	Char	12	Read		
315	Asset6SoftwareVersion	Char	12	Read		
316	Asset7SoftwareVersion	Char	12	Read		
317	Asset8SoftwareVersion	Char	12	Read		
318	Asset9SoftwareVersion	Char	12	Read		
319	Asset10SoftwareVersion	Char	12	Read		
320	FirmwareUpgradeoverNetworkEnable	Enumeration	1	Read / Write	FirmwareUpgradeoverNetworkEnable: Used to initiate the firmware upgrade of the network module. Firmware file is required to be loaded first via FTP. Writing 1 initiates upgrade.	
321	FileLoadStatus	Enumeration	1	Read / Write	FileLoadStatus: Status parameter for data log and config file compilation. 0 - Idle, or Done (ready for download from the option card webpages). 1 - Set to 1 to start data log/config file compilation. Or if reading, 1 indicates compilation in progress. 2 - Error during compilation. The option card must first get the data log from the actuator user interface board, initiated by setting this parameter to 1, once compiled and 'Done' is indicated, then it's ready for download from the webpages. Used by option card webpages ONLY.	
322	FileLoadProgress	Unsigned int	2	Read	FileLoadProgress: Progress parameter for data log and config file compilation. Range 0 to 100, indicating % complete. Used by option card webpages ONLY.	
323	DataLogTimestamp	Char	16	Read / Write	DataLogTimestamp: Data log and configuration date and time. Used by option card webpages ONLY.	
324	LimitedRangePositionMin	Unsigned int	2	Read / Write	Minimum Range: Minimum span for positioning in 100ths %.	
325	LimitedRangePositionMax	Unsigned int	2	Read / Write	Maximum Range: Maximum span for positioning in 100ths %.	
326	Deadband	Unsigned int	2	Read / Write	Deadband: Deadband range in both directions whilst positioning in 100ths %.	
327	Hysteresis	Unsigned int	2	Read / Write	Hysteresis: Hysteresis range in both directions whilst positioning in 100ths %.	
328	IQT3SlowModeSpeed	Unsigned int	2	Read / Write	Slow Mode: Speed setting for operation near limits, percentage of rated speed.	
329	MotionInhibitTimeMs	Unsigned int	4	Read / Write	MIT: Motion Inhibit Timer in ms.	
330	ManualMovementTravel	Unsigned int	2	Read / Write	Manual Movement: Movement required to generate manual movement indication in 100ths %.	
331	AuxInputTypeMask	Bitfield	2	Read / Write	Aux Mask: Auxiliary function type, value (1) command action (0) Digital Input (DI). Bits 0-3 representing the actions DI1/Open, DI2/Close, DI3/STOP or Maintain, DI4/ESD see bit fields.	
332	AuxInputContactStateMask	Bitfield	2	Read / Write	Aux Input: Auxiliary input type, value (1) Normally open (0) Normally closed. Bits 0-3 representing the actions DI1/Open, DI2/Close, DI3/STOP or Maintain, DI4/ESD see bit fields.	
333	PartialStrokePosition	Unsigned int	2	Read / Write	Partial Stroke Position: Specifies the position to move to when the partial stroke action is invoked.	
334	PartialStrokeStartingLimit	Enumeration	1	Read / Write	Partial Stroke Limit: Sets the initial position from where the partial stroke test is to run. 0 – Test from open limit 1 – Test from closed limit	
335	PartialStrokeOutTimeMs	Unsigned int	4	Read / Write	Partial Stroke Out Time: Time taken to reach the specified partial stroke position as set by parameter index 333 (multiples of 1ms).	
336	PartialStrokeReturnTimeMs	Unsigned int	4	Read / Write	Partial Stroke Return Time: Time taken to return to the starting position of a partial stroke (multiples of 1ms).	

Note: Indices 28 to 31 are reserved and 324 onwards are not available on v103 firmware

6 Parameters

Index	Data Name	Data Type	Data Size (octets)	Data Access	Description
337	CloseTorqueSet	Unsigned int	2	Read	Close Torque Set: The torque percentage of rated in the close direction in 0-100%.
338	OpenTorqueSet	Unsigned int	2	Read	Open Torque Set: The torque percentage of rated in the Open direction in 0-100%.
339	EsdNetDisable	Enumeration	1	Read / Write	ESD NetDisable: When set the ESD input will act as a 'net disable input' and not ESD. Meaning that commands via the network can be disabled if the input is activated. 0 – ESD input 1 – Net disable input
340	EsdAction	Enumeration	1	Read / Write	ESD Action: Sets the programmed action to be performed when the ESD is active. 0 – Close 1 – Stop 2 – Open 3 – Off 4 – Reserved 5 – Position
341	EsdContact	Enumeration	1	Read / Write	ESD Contact: Sets the contact type for the ESD 0 – Normally closed 1 – Normally open
342	EsdOverrideInterlock	Enumeration	1	Read / Write	ESD Override Interlock: Sets whether the ESD can override an interlock signal. 0 – No 1 – Yes
343	EsdOverrideThermostatTrip	Enumeration	1	Read / Write	ESD Override Thermostat: Sets whether the ESD can over ride an interlock signal. 0 – No 1 – Yes
344	EsdOverrideLocalStop	Enumeration	1	Read / Write	ESD Override Local Stop: Sets whether the ESD can over ride a Local Stop signal. 0 – No 1 – Yes
345	EsdOverrideInterruptTimer	Enumeration	1	Read / Write	ESD Override Interrupter Timer: Sets whether the ESD can over ride the Interrupter Timer. 0 – No 1 – Yes
346	InterlocksInputMode	Enumeration	1	Read	Interlocks Mode: Indicates which mode the interlocks will operate in. 0 – Interlocks disabled 1 – Interlocks enabled 2 – Conditional control enabled 3 – Partial stroke on open interlock
347	InterruptTimerStartingLimit	Enumeration	1	Read / Write	Interrupter Timer Start Point: Sets the limit (open/closed) that the interrupter timer is to operate at. 0 – Closed limit 1 – Open limit
348	InterruptTimerOnTime100Ms	Unsigned int	4	Read / Write	Interrupter Timer On: Sets the On time for the Interrupter Time - the time that the motor is energised, in 100ms steps.
349	InterruptTimerOffTime100Ms	Unsigned int	4	Read / Write	Interrupter Timer Off: Sets the Off time for the Interrupter Time - the time that the motor is de-energised, in 100ms steps.
350	InterruptTimerPositionOpenDirection	Unsigned int	2	Read / Write	Interrupter Timer Position Open: Sets the position in the Open direction which the function will operate in 100ths percent.
351	InterruptTimerPositionCloseDirection	Unsigned int	2	Read / Write	Interrupter Timer Position Close: Sets the position in the close direction which the function will operate in 100ths percent.
352	AnalogueInputMinMax	Enumeration	1	Read / Write	Analogue Input Span: Writing to this parameter will set up the span for the analogue input. A value of 1 will calibrate the maximum input and a value of 2 will calibrate the minimum. The relevant signals will need to be applied to the input prior to sending the command.
353	MultiportTargetPort	Unsigned int	2	Read	Multiport Target Port: The port number which the actuator is currently attempting to position to or has been instructed to move to. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
354	MultiportPositionDegrees	Unsigned int	2	Read	Multiport Position Degrees: The position of the actuator in degrees where 0° is the first port. Intermediate positions are divided equally by the number of ports. For example, for 3 ports: – Port 1 = 0° – Port 2 = 120° – Port 3 = 240° Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
355	MultiportNumPorts	Unsigned int	2	Read	Multiport Number of Ports: Indicates the number of ports set up in a Multiport actuator. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
356	MultiportActivePorts	Bitfield	2	Read / Write	Multiport Active Ports: Allows the set ports to be deactivated. 16 Bit field representing 16 ports (see bit fields). Bit value 1 means port active, a 0 means port inactive. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
357	MultiportCurrentBacklash	Signed int	2	Read	Multiport Current Backlash: This value is used to remove backlash in the system when operating in bidirectional mode. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
358	MultiportEsdPort	Unsigned int	2	Read / Write	Multiport ESD Port: Sets the target port the unit is to go to in the event of an ESD. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
359	MultiportDirection	Enumeration	1	Read	Multiport Direction Mode: Indicates the direction mode set in the Multiport unit. Value 0 - Bidirectional-no wrap, 1 - Clockwise only, 2 - Anti-clockwise only, 3 - Bidirectional-wrap. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.

Note: Indices 28 to 31 are reserved and 324 onwards are not available on v103 firmware

6 Parameters

6.2 Producing and consuming data (implicit messaging)

6.2.1 Producing data (Assem100)

Parameter Number	Parameter Name	Data Type	Bits	Bit Description (For detailed information see Bitfield and Parameter table)
1	StatusData1	Bitfield	0	Digital Input 1
			1	Digital Input 2
			2	Digital Input 3
			3	Digital Input 4
			4	Digital Input 5
			5	Digital Input 6
			6	Digital Input 7
			7	Digital Input 8
			8	Relay 9 Status
			9	Relay 10 Status
			10	Relay 11 Status
			11	Relay 12 Status
			12	Digital Input 9
			13	Digital Input 10
			14	Digital Input 11
15	Digital Input 12			
2	StatusData2	Bitfield	0	Relay 1 Status
			1	Relay 2 Status
			2	Relay 3 Status
			3	Relay 4 Status
			4	Relay 5 Status
			5	Relay 6 Status
			6	Relay 7 Status
			7	Relay 8 Status
			8	Motor Running
			9	Moving Open
			10	Moving Close
			11	Close Limit Reached
			12	Open Limit Reached
			13	Column Moving
			14	Remote Selected
15	Local Selected			
3	StatusData3	Bitfield	0	Local Stop Selected
			1	Reserved
			2	Torque Trip Open Active
			3	Torque Trip Close Active
			4	Reserved
			5	Interrupter Timer Active
			6	Motion Inhibit Timer Active
			7	Stopped Mid Travel
			8	ESD Active
			9	Partial Stroke in Progress
			10	Phase Sequence
			11 to 12	Reserved
			13	Partial Stroke Passed
			14	Reserved
			15	Positioner Active
4	StatusData4	Bitfield	0	Slow Mode Active
			1 to 15	Reserved
5	AlarmData1	Bitfield	0	EEPROM checksum error
			1	Thermostat Tripped
			2	Valve Obstructed
			3	Valve Jammed
			4	Manual Movement
			5	Manual movement in Close direction
			6	Manual Movement in Open Direction
			7	Manual movement moved valve to close position
			8	Manual Movement moved valve to open position
			9	End of travel movement
			10	Actuator has stalled
			11	Monitor Relay
			12	Reserved
			13	Battery Low
			14	Battery Flat
15	EEPROM Updated			

6 Parameters

Parameter Number	Parameter Name	Data Type	Bits	Bit Description (For detailed information see Bitfield and Parameter table)
6	AlarmData2	Bitfield	0	Datalogger Updated
			1	General Alarm
			2	Valve Alarm
			3	Actuator Alarm
			4	Network Card Fault
			5	Partial Stroke Error
			6	Control Contention
			7	Mains Fault
			8	Comms Loss
			9	Loss of Phase
			10	24VDC Customer fault
			11	Control Alarm
			12	Position Sensor Fault
			13	Torque Sensor Fault
			14	Torque Tripped Mid-Travel
15	Local control signal held active when in remote			
7	AlarmData3	Bitfield	0 to 2	Reserved
			3	Maintance Alert
			4	Critical Fault
			5	Non-Critical Fault
			6	Reserved
			7	Open Interlock Active
			8	Close Interlock Active
			9	Vibration Service Alarm
			10	Valve Travel Time Exceeded
			11	Auxillary Override Alarm
			12	NAMUR Maintenance
			13	NAMUR Out Of Specification Level
			14	NAMUR Function Check
			15	NAMUR Failure
			8	AlarmData4
1	Closed Loop Control fault			
2 to 15	Reserved			
9	DigitalControlIndication	Bitfield	0	Open
			1	Close
			2	Stop
			3	ESD
			4	PartialStroke
			5	Reserved
			6	HandAuto
			7	PositionEnable
			8 to 14	Reserved
			15	PositionEnable
10	DesiredPositionIndication	Unsigned int	0 to 15	Read Only
11	Position	Unsigned int	0 to 15	Read Only
12	TorqueOrThrust	Signed int	0 to 15	Read Only
13	Temperature	Signed int	0 to 15	Read Only
14	Analogueinput1	Unsigned int	0 to 15	Read Only
15	Analogueinput2	Unsigned int	0 to 15	Read Only
16	NAMURAlarmDataAllMasked	Bitfield	0	Battery Low
			1	Local Control Fault
			2	Power Fault
			3	Thermostat
			4	Service Contactor
			5	Service Due
			6	Service Hi Hi Trip
			7	Service Hi Trip
			8	Service Motor Starts
			9	Service Output Turns
			10	Monitor Relay
			11	Control Fail
			12	Actuator Fail
			13	Comms Fail
			14	Hardware Option Fail
			15	Partial Stroke Error
			16	Valve Error
			17	Actuator Stalled
			18	Position Limp Home
			19	End of Travel Move
			20	Network Card Fault
			21	Customer Power Supply Fail
			22	Valve Travel Time
			23	Wrong Direction Detected
24 to 31	Reserved			

Note: Parameter 15 is not included in the Producing data (Assem100) message from v105 firmware onwards.

6 Parameters

Parameter Number	Parameter Name	Data Type	Bits	Bit Description (For detailed information see Bitfield and Parameter table)
17	NAMURFailureAlarmData	Bitfield	0	Battery Low
			1	Local Control Fault
			2	Power Fault
			3	Thermostat
			4	Service Contactor
			5	Service Due
			6	Service Hi Hi Trip
			7	Service Hi Trip
			8	Service Motor Starts
			9	Service Output Turns
			10	Monitor Relay
			11	Control Fail
			12	Actuator Fail
			13	Comms Fail
			14	Hardware Option Fail
			15	Partial Stroke Error
			16	Valve Error
			17	Actuator Stalled
			18	Position Limp Home
			19	End of Travel Move
			20	Network Card Fault
			21	Customer Power Supply Fail
			22	Valve Travel Time
			23	Wrong Direction Detected
24 to 31	Reserved			
18	NAMUROutOfSpecAlarmData	Bitfield	0	Battery Low
			1	Local Control Fault
			2	Power Fault
			3	Thermostat
			4	Service Contactor
			5	Service Due
			6	Service Hi Hi Trip
			7	Service Hi Trip
			8	Service Motor Starts
			9	Service Output Turns
			10	Monitor Relay
			11	Control Fail
			12	Actuator Fail
			13	Comms Fail
			14	Hardware Option Fail
			15	Partial Stroke Error
			16	Valve Error
			17	Actuator Stalled
			18	Position Limp Home
			19	End of Travel Move
			20	Network Card Fault
			21	Customer Power Supply Fail
			22	Valve Travel Time
			23	Wrong Direction Detected
24 to 31	Reserved			
19	NAMURFunctionCheckAlarmData	Bitfield	0	Battery Low
			1	Local Control Fault
			2	Power Fault
			3	Thermostat
			4	Service Contactor
			5	Service Due
			6	Service Hi Hi Trip
			7	Service Hi Trip
			8	Service Motor Starts
			9	Service Output Turns
			10	Monitor Relay
			11	Control Fail
			12	Actuator Fail
			13	Comms Fail
			14	Hardware Option Fail
			15	Partial Stroke Error
			16	Valve Error
			17	Actuator Stalled
			18	Position Limp Home
			19	End of Travel Move
			20	Network Card Fault
			21	Customer Power Supply Fail
			22	Valve Travel Time
			23	Wrong Direction Detected
24 to 31	Reserved			

6 Parameters

Parameter Number	Parameter Name	Data Type	Bits	Bit Description (For detailed information see Bitfield and Parameter table)
20	NAMURMaintenanceAlarmData	Bitfield	0	Battery Low
			1	Local Control Fault
			2	Power Fault
			3	Thermostat
			4	Service Contactor
			5	Service Due
			6	Service Hi Hi Trip
			7	Service Hi Trip
			8	Service Motor Starts
			9	Service Output Turns
			10	Monitor Relay
			11	Control Fail
			12	Actuator Fail
			13	Comms Fail
			14	Hardware Option Fail
			15	Partial Stroke Error
			16	Valve Error
			17	Actuator Stalled
			18	Position Limp Home
			19	End of Travel Move
			20	Network Card Fault
			21	Customer Power Supply Fail
			22	Valve Travel Time
			23	Wrong Direction Detected
24 to 31	Reserved			
21	NAMURStatusAlarmData	Bitfield	0	Battery Low
			1	Local Control Fault
			2	Power Fault
			3	Thermostat
			4	Service Contactor
			5	Service Due
			6	Service Hi Hi Trip
			7	Service Hi Trip
			8	Service Motor Starts
			9	Service Output Turns
			10	Monitor Relay
			11	Control Fail
			12	Actuator Fail
			13	Comms Fail
			14	Hardware Option Fail
			15	Partial Stroke Error
			16	Valve Error
			17	Actuator Stalled
			18	Position Limp Home
			19	End of Travel Move
			20	Network Card Fault
			21	Customer Power Supply Fail
			22	Valve Travel Time
			23	Wrong Direction Detected
24 to 31	Reserved			
24	NetworkStatus1	Bitfield	0	Byte0_AbccCommsFault
			1	Byte0_EEPROMFault
			2	Byte0_AbccCfgGetErr
			3	Byte0_FtpEnabled
			4	Byte0_AbccCfgSetErr
			5	Byte0_EthLink10MbpsPort1
			6	Byte0_ControlContention
			7	Byte0_CANFault
			8	Byte1_CommsPresent
			9	Byte1_WriteError
			10	Byte1_HWCconfigLinkActive
			11	Byte1_DatalogDownloadFail
			12	Byte1_EthLink100MbpsPort1
			13 to 14	Reserved
			15	Byte1_AbccCfgOutOfSync
25	NetworkStatus2	Bitfield	0	Byte2_EthLink10MbpsPort2
			1	Byte2_EthLink100MbpsPort2
2 to 15	Reserved			
26	NetworkStatus3	Bitfield	0 to 15	Reserved
27	NetworkStatus4	Bitfield	0 to 15	Reserved
28	MulitportStatus1	Bitfield	0 to 3	TargetPort
			4 to 7	Start Port
			8 to 11	Last Good Port
			12	Stuck Between Ports
			13	Moving Clockwise
			14	Moving AntiClockwise
15	Reserved			
29	MulitportStatus2	Bitfield	0 to 6	Target Port Position
			7	Degree Of Rotation MSB
8 to 15	Degree Of Rotation LSB			
30	MulitportStatus3	Bitfield	0 to 7	Current Position
			8 to 15	Count To Nearest Port MSB
31	MulitportStatus4	Bitfield	0 to 7	Count To Nearest Port LSB
			8 to 15	Reserved

6 Parameters

Parameter Number	Parameter Name	Data Type	Bits	Bit Description (For detailed information see Bitfield and Parameter table)
32	MultiportNearestPort	Unsigned Int	0 to 15	Multiport Nearest Port
353	MultiportTargetPort	Unsigned int	0 to 15	Multiport Target Port
354	MultiportPositionDegrees	Unsigned int	0 to 15	Multiport Position Degrees

6.2.2 Consuming data (Assem150)

Parameter Number	Parameter Name	Data Type	Bits	Bit Description (For detailed information see Bitfield and Parameter table)
22	DigitalControl	Bitfield	0	Open
			1	Close
			2	Stop
			3	ESD
			4	PartialStroke
			5	Reserved
			6	HandAuto
			7 to 14	Reserved
15	PositionEnable			
23	DesiredPosition	Unsigned Int	0 to 15	Position Control
33	SetResetRelays	Bitfield	0 to 31	SetResetRelays

6 Parameters

6.3 Bitfields

Index	Data Name	Bit Name	Bit Mask	Description
1	StatusData1	Byte0_DI1	0x0001	Digital Input 1: Reports the status of the contact connected to the actuator hard-wired Open terminal. The input can be used to control the actuator or simply to report the status of a plant feedback signal. The function is set in the Auxiliary Input Mask parameter which determines whether the bit is reported as true (1) for a closed contact or an open contact and whether the input controls the actuator or not. Note that the input is always reported even when it is also controlling the actuator. For details on the Auxiliary Input mask, please refer to the description in PUB002-040 .
		Byte0_DI2	0x0002	Digital Input 2: Reports the status of the contact connected to the actuator hard-wired Close terminal. The input can be used to control the actuator or simply to report the status of a plant feedback signal. The function is set in the Auxiliary Input Mask parameter which determines whether the bit is reported as true (1) for a closed contact or an open contact and whether the input controls the actuator or not. Note that the input is always reported even when it is also controlling the actuator. For details on the Auxiliary Input mask, please refer to the description in PUB002-040 .
		Byte0_DI3	0x0004	Digital Input 3: Reports the status of the contact connected to the actuator hard-wired Stop / Maintain terminal. The input can be used to control the actuator or simply to report the status of a plant feedback signal. The function is set in the Auxiliary Input Mask parameter which determines whether the bit is reported as true (1) for a closed contact or an open contact and whether the input controls the actuator or not. Note that the input is always reported even when it is also controlling the actuator. For details on the Auxiliary Input mask, please refer to the description in PUB002-040 .
		Byte0_DI4	0x0008	Digital Input 4: Reports the status of the contact connected to the actuator hard-wired ESD terminal. The input can be used to control the actuator or simply to report the status of a plant feedback signal. The function is set in the Auxiliary Input Mask parameter which determines whether the bit is reported as true (1) for a closed contact or an open contact and whether the input controls the actuator or not. Note that the input is always reported even when it is also controlling the actuator. For details on the Auxiliary Input mask, please refer to the description in PUB002-040 .
		Byte0_DI5	0x0010	Digital Input 5 to Digital Input 8: These bits report the status of the contact connected to the optional actuator hard-wired Digital Inputs 5 to 8. These are ignored if the optional digital input card for contacts S5 to S8 is not fitted.
		Byte0_DI6	0x0020	
		Byte0_DI7	0x0040	
		Byte0_DI8	0x0080	
		Byte1_R9	0x0100	Relay 9 Status to Relay 12 Status: These bits report the status of relays 9 to 12 (S contacts 9 to 12). These are ignored if the optional digital input card for relays S9 to 12 is not fitted.
		Byte1_R10	0x0200	
		Byte1_R11	0x0400	
		Byte1_R12	0x0800	
		Byte1_DI9	0x1000	Digital Input 9 to Digital Input 12: These bits report the status of the signal connected to the optional actuator hard-wired Digital Inputs 9 to 12 (if fitted).
		Byte1_DI10	0x2000	
		Byte1_DI11	0x4000	
		Byte1_DI12	0x8000	
2	StatusData2	Byte2_S1	0x0001	Relay 1 Status to Relay 8 Status: These bits report the status of relays 1 to 8 (S contacts 1 to 8).
		Byte2_S2	0x0002	
		Byte2_S3	0x0004	
		Byte2_S4	0x0008	
		Byte2_S5	0x0010	
		Byte2_S6	0x0020	
		Byte2_S7	0x0040	
		Byte2_S8	0x0080	
		Byte3_MRUN	0x0100	Motor Running: True (1) when the actuator is attempting to run the motor.
		Byte3_MOP	0x0200	Moving Open: True (1) when the actuator is moving to the open position.
		Byte3_MCL	0x0400	Moving Close: True (1) when the actuator is moving to the closed position.
		Byte3_CLT	0x0800	Close Limit Reached: True (1) when the actuator is at the closed limit.
		Byte3_OLT	0x1000	Open Limit Reached: True (1) when the actuator is at the open limit.
		Byte3_COLMOV	0x2000	Column Moving: True (1) when actuator the centre column is rotating.
		Byte3_RSEL	0x4000	Remote Selected: True (1) when the actuator three position remote / local stop / local selector is in the Remote position. The selector must be in this position for control using the option card to be permitted.
		Byte3_LOCAL	0x8000	Local Selected: True (1) when the actuator three position remote / local stop / local selector is in the Local position. Remote control of the actuator is not possible when the selector is in this position.
3	StatusData3	Byte4_LSTOP	0x0001	Local Stop Selected: The actuator three position selector passes from Local to Remote or Remote to Local through the Local Stop position. The switch can also be placed in Local Stop. When the switch is in the Local Stop position this bit will be true (1). Remote control of the actuator is not possible when the selector is in this position.
		Byte4_LTEST	0x0002	Reserved.
		Byte4_TTC	0x0004	Torque Trip Open Active: True (1) when the actuator has torqued off in the open direction.
		Byte4_TTA	0x0008	Torque Trip Close Active: True (1) when the actuator has torqued off in the close direction.
		Byte4_SM	0x0010	Reserved.
		Byte4_JTA	0x0020	Interrupter Timer Active: True (1) when the interrupter timer is active. The Interrupter Timer in the can be used over part or the entire actuator stroke to slow down the effective speed of valve travel.
		Byte4_MIT	0x0040	Motion Inhibit timer Active: True (1) when the Motion Inhibit timer is active. The Motion Inhibit Timer is used in position control to prevent the actuator from exceeding its prescribed number of starts per hour, or to reduce the effects of hunting during closed loop control.
		Byte4_SMT	0x0080	Stopped Mid Travel: True (1) when the actuator has stopped in mid travel (i.e. not at the closed or open limit).
		Byte5_ESD	0x0100	ESD Active: True (1) when an ESD is active.
		Byte5_PSA	0x0200	Partial Stroke in Progress: True (1) when a partial stroke test is active.
		Byte5_PHSEQ	0x0400	Phase Sequence is True (1) when the phase sequence is positive.
		Byte5_LocalRun	0x0800	Reserved.
Byte5_SpareStatus4	0x1000	Reserved.		
Byte5_SpP	0x2000	Partial Stroke Passed: True (1) when a partial stroke test completed successfully.		
Byte5_PowerMode	0x4000	Reserved.		
Byte5_PositionerActive	0x8000	Positioner Active: True (1) when the actuator moving due to a position command.		

6 Parameters

Index	Data Name	Bit Name	Bit Mask	Description
4	StatusData4	Byte6_SlowModeActive	0x0001	Slow Mode Active: True (1) when slow mode is active. Applicable to IQT actuators only. In positioning mode, when the IQT actuator approaches its setpoint the motor automatically switches to 'slow mode' and the actuator runs at a lower speed. This allows any developed inertia to be dissipated and a better positional accuracy to be achieved without overshoot. Please refer to PUB002-040 for further details.
		Byte6_SpareStatus1	0x0002	Reserved.
		Byte6_SpareStatus2	0x0004	
		Byte6_SpareStatus3	0x0008	
		Byte6_SpareStatus4	0x0010	
		Byte6_SpareStatus5	0x0020	
		Byte6_SpareStatus6	0x0040	
		Byte6_SpareStatus7	0x0080	
5	AlarmData1	Byte0_EEPROM	0x0001	EEPROM checksum error: True (1) when there is a configuration error.
		Byte0_THERM	0x0002	Thermostat Tripped: If the temperature of the motor windings rises above the thermostat trip value, the thermostat contact will open, and this signal will be present (1). There are no adjustments for the temperature at which the thermostat trip operates. The motor will be stopped if the thermostat trips. Only once the motor has cooled down and the thermostat has reset itself can a new Remote, Network Host or Local command to move the actuator be carried out.
		Byte0_VOBS	0x0004	Valve Obstructed: True (1) if the actuator stops in mid travel when not expected to do so after receiving a command to move. The bit will remain true (1) until the actuator position changes by 2% or more.
		Byte0_VJAM	0x0008	Valve Jammed: True (1) if the actuator is stationary at the end of travel and fails to move away from the seat of the valve when expected to do so. The bit will remain true (1) until the actuator position changes by 2% or more.
		Byte0_MAN	0x0010	Manual Movement: True (1) when the actuator is moved by the handwheel away from the last position.
		Byte0_MCLG	0x0020	Manual Movement in close direction: True (1) when the actuator is moved by the handwheel away from the last position in the close direction.
		Byte0_MOPG	0x0040	Manual Movement in open direction: True (1) when the actuator is moved by the handwheel away from the last position in the open direction.
		Byte0_MCL	0x0080	Manual movement moved valve to close position: True (1) when the actuator is moved by the handwheel to the closed limit.
		Byte1_MOP	0x0100	Manual movement moved valve to open position: True (1) when the actuator is moved by the handwheel to the open limit.
		Byte1_EOT	0x0200	End of travel movement: True (1) when movement after the actuator has reached its limit occurs.
		Byte1_STALL	0x0400	Actuator has stalled: True (1) when the actuator is trying to operate, but there is no centre column motion.
		Byte1_MR	0x0800	Monitor Relay: True (1) when actuator remote control is not available. The actuator Monitor Relay status is a composite signal for several alarms. See PUB002-040 for details.
		Byte1_WD	0x1000	Reserved.
		Byte1_BL	0x2000	Battery Low: The status of the internal battery is monitored, and should it fall below a critical level this signal will become true (1). The battery is used to power the circuits used to keep track of the valve position when the actuator mains power is switched off. This battery is used only when the actuator has no power feed, and the valve is moved.
		Byte1_BF	0x4000	Battery flat: The status of the internal battery is monitored, and should it fall below a critical level this signal will become true (1). The battery is used to power the circuits used to keep track of the valve position when the actuator mains power is switched off. This battery is used only when the actuator has no power feed, and the valve is moved.
		Byte1_EEU	0x8000	EEPROM Updated: True (1) when the configuration of the actuator has been updated.
Byte2_DU	0x0001	Datalogger Updated: True (1) when the datalogger in the actuator has been updated.		
6	AlarmData2	Byte2_GA	0x0002	General Alarm: True (1) when any alarm is detected, including battery low or flat, valve alarm, actuator alarm, control alarm, valve obstructed or jammed (torque tripped) or monitor relay (not available for remote control).
		Byte2_VA	0x0004	Valve Alarm: True (1) when the actuator has tripped on torque in any direction in mid travel or on the limit (when not set to torque off on limit) or when the actuator has stalled.
		Byte2_AA	0x0008	Actuator Alarm: True (1) when any of the actuator alarm are set, these include: Phase loss, thermostat tripped, local controls fail, position sensor fail, torque sensor fail, power loss inhibit enabled and active, EEPROM Error, local signal in remote, position loss fail.
		Byte2_NWKF	0x0010	Network Card Fault: True (1) when a fault is being indicated by the option card. It is caused by one or more of the following conditions: <ul style="list-style-type: none"> • Network card configuration error • Remote Hand Station error • Battery charger communications error
		Byte2_PSE	0x0020	Partial Stroke Error: True (1) when an error occurs when requesting or operating a partial stroke test. For example, the partial stroke cannot complete as the unit is at the wrong limit.
		Byte2_COCT	0x0040	Control Contention: True (1) when there is contention in control, if more than one actuator control bit is active.
		Byte2_MF	0x0080	Mains Fail: True (1) when there is a power supply failure.
		Byte3_COMMS	0x0100	Comms Loss: True (1) if communication is lost between the option card and actuator, or if one or more CIP Class 1 or Class 3 connections have been lost.
		Byte3_LOP	0x0200	Loss of Phase: True (1) if a phase is lost in a three-phase actuator.
		Byte3_24VDC	0x0400	24VDC Customer fault: True (1) if the 24V supply from the actuator (customer supply) has a fault.
		Byte3_CA	0x0800	Control Alarm: True (1) if an ESD is active or an Interlock active and inhibiting the actuator.
		Byte3_PSF	0x1000	Position Sensor Fault: True (1) if the position sensor (encoder) is in alarm.
		Byte3_TSF	0x2000	Torque Sensor Fault: True (1) if the torque sensor is in alarm.
		Byte3_TTM	0x4000	Torque Tripped Mid-Travel: True (1) if the actuator has tripped on torque when it is mid travel and not at a limit position.
		Byte3_LSH	0x8000	Local control signal held active when in remote: True (1) if the local control knob is held in the open of close position for an extended period, when in remote.
		7	AlarmData3	Byte4_FS
Byte4_TPL	0x0002			Reserved.
Byte4_TPH	0x0004			Reserved.
Byte4_MA	0x0008			Maintenance Alert: True (1) when maintenance action is required.

6 Parameters

Index	Data Name	Bit Name	Bit Mask	Description
7	AlarmData3	Byte4_CriticalFault	0x0010	Critical Fault: True (1) if a product-specific critical fault has been detected. Conditions include: <ul style="list-style-type: none"> • Thermostat active • Phase lost • RHS Local selected • Position sensor fault • Position loss inhibit active • UIB comms error
		Byte4_NonCriticalFault	0x0020	Non-critical fault: True (1) if a product specific non-critical fault has been detected. Conditions include: <ul style="list-style-type: none"> • Valve obstructed • Valve jammed • Motor stalled • Option detection error • ESD active • Close or open interlock active • Battery flat • Battery low • Partial stroke fail • Customer supply fail
		Byte4_TestFailed	0x0040	Reserved.
		Byte4_OpenIntlkActive	0x0080	Open Interlock Active: True (1) if an Open Interlock is active and is inhibiting the actuator.
		Byte5_CloseIntlkActive	0x0100	Close Interlock Active: True (1) if a Close Interlock is active and is inhibiting the actuator
		Byte5_Vibration	0x0200	Vibration service alarm: True (1) if the configurable vibration service alarm is active.
		Byte5_VVT	0x0400	Valve Travel Time Exceeded: True (1) if the configurable Valve Travel Time alarm is active.
		Byte5_AUXOR	0x0800	Auxiliary Override Alarm: True (1) if the configurable auxiliary inputs mask value results in an auxiliary input overriding control.
		Byte5_NAMURMaintenance	0x1000	NAMUR Maintenance: True (1) if the Maintenance level NAMUR alarm has tripped. More details can be found in publication PUB002-040 .
		Byte5_NAMUROutOfSpec	0x2000	NAMUR Out of Specification: True (1) if the Out of Specification level NAMUR alarm has tripped. More details can be found in publication PUB002-040 .
Byte5_NAMURFunctionCheck	0x4000	NAMUR Function Check: True (1) if the Function Check level NAMUR alarm has tripped. More details can be found in publication PUB002-040 .		
Byte5_NAMURFailure	0x8000	NAMUR Failure: True (1) if the Failure level NAMUR alarm has tripped. More details can be found in publication PUB002-040 .		
8	AlarmData4	Byte6_NetDisableActive	0x0001	Network Disable Active: True (1) if control via the option card is being disabled by the Network disable feature.
		Byte6_CLCFaultAlarm	0x0002	Closed Loop Control fault: True (1) if there is a fault in the Closed Loop Control function. Reserved.
		Byte6_SpareAlarm2	0x0004	
		Byte6_SpareAlarm3	0x0008	Reserved.
		Byte6_SpareAlarm4	0x0010	
		Byte6_SpareAlarm5	0x0020	
		Byte6_SpareAlarm6	0x0040	
Byte6_SpareAlarm7	0x0080			
9	DigitalControlIndication	Open	0x0001	Open: True (1) when the actuator is being commanded into the open direction. (indication ONLY). Multiport/Multiset: increments port number.
		Close	0x0002	Close: True (1) when the actuator is being commanded into the close direction. (indication ONLY). Multiport/Multiset: Decrements port number.
		Stop	0x0004	Stop: True (1) when the actuator is being commanded to Stop. (indication ONLY).
		ESD	0x0008	ESD: True (1) when the actuator is being commanded to perform an ESD. (indication ONLY).
		PartialStroke	0x0010	PartialStroke: True (1) when the actuator is being commanded to perform a Partial Stroke. (indication ONLY).
		NoLongerUsed	0x0020	Reserved.
		HandAuto	0x0040	HandAuto: True (1) when the actuator is being controlled via a secondary control source (e.g. in folomatic case, to allow remote operation).
PositionEnable	0x8000	PositionEnable: True (1) when the actuator is enabled to be commanded to an intermediate position using Position control Parameter. (indication ONLY).		
16	NAMURAllMaskedAlarmData	Byte0_BatteryLowFlat	0x00000001	Battery low.
17	NAMURFailureAlarmData	Byte0_LocalControlFault	0x00000002	Local control fault.
18	NAMUROutOfSpecAlarmData	Byte0_PowerFault	0x00000004	Mains failure.
19	NAMURFuncCheckAlarmData	Byte0_Thermostat	0x00000008	Thermostat.
20	NAMURMaintenanceAlarmData	Byte0_ServiceContactor	0x00000010	Service contactor.
21	NAMURStatusAlarmData	Byte0_ServiceDue	0x00000020	Service due.
		Byte0_ServiceHiHiTrip	0x00000040	Hi Hi torque alarm.
		Byte0_ServiceHiTrip	0x00000080	Hi torque alarm.
		Byte1_ServiceMotorStarts	0x00000100	Motor starts
		Byte1_ServiceOutputTurns	0x00000200	Total turns.
		Byte1_MonitorRelay	0x00000400	Monitor relay.
		Byte1_ControlFail	0x00000800	Control failure.
		Byte1_ActuatorFail	0x00001000	Actuator failure.
		Byte1_CommsFail	0x00002000	Comms loss.
		Byte1_HardwareOptionFail	0x00004000	Option not detected.
		Byte1_PartialStrokeError	0x00008000	Partial stroke failure.
		Byte2_ValveError	0x00010000	Valve obstructed.
		Byte2_ActuatorStalled	0x00020000	Motor stalled.
		Byte2_PosLimpHome	0x00040000	Position limp home.
		Byte2_EOT	0x00080000	End travel move.
		Byte2_NWRKFault	0x00100000	Network card fault.
		Byte2_24VDCCustSupplyFail	0x00200000	Customer power supply failure.
		Byte2_VVT	0x00400000	Valve travel time.
		Byte2_WrongDirectionFail	0x00800000	Wrong direction detected.

6 Parameters

Index	Data Name	Bit Name	Bit Mask	Description
22	DigitalControl	Open	0x0001	Open: Set this bit true (1) to command the actuator into the open direction.
		Close	0x0002	Close: Set this bit true (1) to command the actuator into the close direction.
		Stop	0x0004	Stop: Set this bit true (1) to command the actuator to Stop.
		ESD	0x0008	ESD: Set this bit true (1) to command the actuator to perform an ESD.
		PartialStroke	0x0010	PartialStroke: Set this bit true (1) to command the actuator to perform a Partial Stroke.
		HandAuto	0x0040	HandAuto: Set this bit true (1) to allow the actuator to be controlled by a secondary control source (e.g. in folomatic case, to allow remote operation).
		PositionEnable	0x8000	PositionEnable: Set this bit true (1) to enable the actuator to be commanded into an intermediate position using Position control Parameter.
24	NetworkStatus1	Byte0_AbccCommsFault	0x0001	AbccCommsFault: True (1) if the option card is failing to communicate with its internal network module.
		Byte0_EEPROMFault	0x0002	EEPROMFault: True (1) when a fault is detected in the EEPROM of the option card.
		Byte0_AbccCfgGetErr	0x0004	AbccCfgGetErr: True (1) when a network related configuration shown on the user interface board or Insight2 is incorrect, for example IP address, subnet mask, hostname, etc.
		Byte0_FtpEnabled	0x0008	FtpEnabled: Set if FTP is enabled on the option card.
		Byte0_AbccCfgSetErr	0x0010	AbccCfgSetErr: True (1) if a network config item set via the user interface board or Insight2 is not successfully set.
		Byte0_EthLink10MbpsPort1	0x0020	EthLink10MbpsPort1: True (1) when there is a 10 Mbps Ethernet link on port 1.
		Byte0_ControlContention	0x0040	ControlContention: True (1) if the option card detects control contention in the parameter DigitalControl (instance 22). If control contention is detected, the option card will not execute the received digital control command.
		Byte0_CANFault	0x0080	CANFault: True (1) if there is a communication fault between the actuator and option card.
		Byte1_CommsPresent	0x0100	CommsPresent: True (1) if one or more CIP (Class 1 or Class 3) connections have been opened towards the option card.
		Byte1_WriteError	0x0200	WriteError: True (1) if the last write command to the DesiredPosition parameter is rejected because the value is out of range.
		Byte1_HWConfigLinkActive	0x0400	HWConfigLinkActive: True (1) if the default HW configuration link (CF1) on the PCB assembly is inserted when the option card is booted.
		Byte1_DatalogDownloadFail	0x0800	DatalogDownloadFail: True (1) if the last data log download failed.
		Byte1_EthLink100MbpsPort1	0x1000	EthLink100MbpsPort1: True (1) when there is a 100 Mbps Ethernet link on port 1.
		Byte1_Reserved5	0x2000	Reserved.
Byte1_Reserved6	0x4000	Reserved.		
Byte1_AbccCfgOutOfSync	0x8000	AbccCfgOutOfSync: True (1) when a network related configuration shown on the user interface board or Insight2 is potentially incorrect, for example IP address, subnet mask, hostname, etc. This occurs when option card is booting, or a new configuration value is being set.		
25	NetworkStatus2	Byte2_EthLink10MbpsPort2	0x0001	EthLink10MbpsPort2: True (1) when there is a 10 Mbps Ethernet link on port 2.
		Byte2_EthLink100MbpsPort2	0x0002	EthLink100MbpsPort2: True (1) when there is a 100 Mbps Ethernet link on port 2.
		Byte2_Reserved2	0x0004	Reserved.
		Byte2_Reserved3	0x0008	
		Byte2_Reserved4	0x0010	
		Byte2_Reserved5	0x0020	
		Byte2_Reserved6	0x0040	
26	NetworkStatus3	Byte2_Reserved7	0x0080	
		Byte3_Reserved	0xFF00	
27	NetworkStatus4	Byte4_Reserved	0x00FF	
		Byte5_Reserved	0xFF00	
28	MultiportStatus1	Byte0_Nibble0_TargetPort	0x000F	Multiport Target Port: 4 bit value representing the target port that the unit is commanded to. A '1' needs to be added to the value returned to get the correct port. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte0_Nibble1_StartPort	0x00F0	Multiport Start Port: 4 bit value representing the port that the unit started from. A '1' needs to be added to the value returned to get the correct port. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte1_Nibble0_LastGoodPort	0x0F00	Multiport Last Good Port: 4 bit value representing the last port the unit passed through. A '1' needs to be added to the value returned to get the correct port. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte1_Bit4_StuckBetweenPorts	0x1000	Multiport Stuck between Ports: Indicates if the actuator is not moving and the current position does not match any port position i.e. the actuator is between ports. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte1_Bit5_MovingClockwise	0x2000	Multiport Moving Clockwise: Indicates if the unit is moving in the clockwise direction. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte1_Bit6_MovingAntiClockwise	0x4000	Multiport Moving Anti-Clockwise: Indicates if the unit is moving in the anti-clockwise direction. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
29	MultiportStatus2	Byte1_Bit7_Reserved	0x8000	Reserved.
		Byte2_Bit0To6_TargetPortPosition	0x007F	Multiport Target Port: Percent value representing the target port that the unit is commanded to. Range 0-100% reflecting 0-360 degrees. 7 bits of byte utilised. Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte2_Bit7_DegreeOfRotationMSB	0x0080	Multiport Degree Of Rotation: 9 bit value representing the degrees of rotation (0-360). Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte3_DegreeOfRotationLSB	0xFF00	

Note: Indices 28 to 31 are reserved and 324 onwards are not available on v103 firmware

6 Parameters

Index	Data Name	Bit Name	Bit Mask	Description
30	MultiportStatus3	Byte4_CurrentPosition	0x00FF	Multiport Current Position: Percent value representing the units current position (0-100%). Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
		Byte5_CountToNearestPortMSB	0xFF00	Multiport Count to Nearest Port: 16 bit value representing the encoder count to the nearest port (0-360).
31	MultiportStatus4	Byte6_CountToNearestPortLSB	0x00FF	Requires the actuator to be a Multiport build, refer to PUB002-221 for more information about Multiport.
33	SetResetRelays	Byte0_Set_Relays	0x000000FF	SetResetRelays: Bit map to control the Relays. Bits 0-7 set relays 1-8 respectively Bits 8-15 set relays 9-16 respectively Bits 16-23 reset relays 1-8 respectively Bits 24-31 reset relays 9-16 respectively
		Byte1_Set_Relays	0x0000FF00	
		Byte2_Reset_Relays	0x00FF0000	
		Byte3_Reset_Relays	0xFF000000	
34 35 36 37	NAMURFailureDataMask NAMUROutOfSpecDataMask NAMURFunctionCheckDataMask NAMURMaintenanceDataMask	Byte0_BatteryLowFlat	0x00000001	See description for instances 16 to 21 in Bitfields Table.
		Byte0_LocalControlFault	0x00000002	
		Byte0_PowerFault	0x00000004	
		Byte0_Thermostat	0x00000008	
		Byte0_ServiceContactor	0x00000010	
		Byte0_ServiceDue	0x00000020	
		Byte0_ServiceHiHiTrip	0x00000040	
		Byte0_ServiceHiTrip	0x00000080	
		Byte2_ServiceMotorStarts	0x00000100	
		Byte1_ServiceOutputTurns	0x00000200	
		Byte1_MonitorRelay	0x00000400	
		Byte1_ControlFail	0x00000800	
		Byte1_ActuatorFail	0x00001000	
		Byte1_CommsFail	0x00002000	
		Byte1_HardwareOptionFail	0x00004000	
		Byte1_PartialStrokeError	0x00008000	
		Byte1_ValveError	0x00010000	
		Byte2_ActuatorStalled	0x00020000	
		Byte2_PosLimpHome	0x00040000	
		Byte2_EOT	0x00080000	
Byte2_NWRKFault	0x00100000			
Byte2_24VDCCustSupplyFail	0x00200000			
Byte2_VVT	0x00400000			
Byte2_WrongDirectionFail	0x00800000			
331	AuxInputTypeMask	Byte0_AuxMaskCmd	0x00FF	Reserved.
		Byte1_DigInput1RmtOpen	0x0100	D11 Remote Open: Command type, 0 - Digital input, 1 - Remote Open.
		Byte1_DigInput2RmtClose	0x0200	D12 Remote Close: Command type, 0 - Digital input, 1 - Remote close.
		Byte1_DigInput3RmtMaint	0x0400	D13 Remote Maintain: Command type, 0 - Digital input, 1 - Remote maintain.
		Byte1_DigInput4RmtEsd	0x0800	D14 Remote ESD: Command type, 0 - Digital input, 1 - Remote ESD.
		Byte1_Nib1_AuxMaxCmd	0xF000	Reserved.
332	AuxInputContactStateMask	Byte0_AuxMaskNormOpen	0x00FF	Reserved.
		Byte1_DigInput1NormOpen	0x0100	D11 Remote Open: Contact type, 0 - Normally closed, 1 - Normally open.
		Byte1_DigInput2NormOpen	0x0200	D12 Remote Close: Contact type, 0 - Normally closed, 1 - Normally open.
		Byte1_DigInput3NormOpen	0x0400	D13 Remote Maintain: Contact type, 0 - Normally closed, 1 - Normally open.
		Byte1_DigInput4NormOpen	0x0800	D14 Remote ESD: Contact type, 0 - Normally closed, 1 - Normally open.
		Byte1_Nib1_AuxMaxNormOpen	0xF000	Reserved.
356	MultiportActivePorts	Byte0_Port9	0x0001	Set if port 9 is active.
		Byte0_Port10	0x0002	Set if port 10 is active.
		Byte0_Port11	0x0004	Set if port 11 is active.
		Byte0_Port12	0x0008	Set if port 12 is active.
		Byte0_Port13	0x0010	Set if port 13 is active.
		Byte0_Port14	0x0020	Set if port 14 is active.
		Byte0_Port15	0x0040	Set if port 15 is active.
		Byte0_Port16	0x0080	Set if port 16 is active.
		Byte1_Port1	0x0100	Set if port 1 is active.
		Byte1_Port2	0x0200	Set if port 2 is active.
		Byte1_Port3	0x0400	Set if port 3 is active.
		Byte1_Port4	0x0800	Set if port 4 is active.
		Byte1_Port5	0x1000	Set if port 5 is active.
		Byte1_Port6	0x2000	Set if port 6 is active.
		Byte1_Port7	0x4000	Set if port 7 is active.
		Byte1_Port8	0x8000	Set if port 8 is active.

Note: Indices 28 to 31 are reserved and 324 onwards are not available on v103 firmware

6 Parameters

6.4 Enumerations

Instance	Data Name	Enum Name	Enum Value	Description
		None	0	
		ClosedLimit	1	Closed limit position (exact).
		OpenLimit	2	Open limit position (exact).
		MotorRunning	4	Motor running.
		Closing	5	Travelling in the close direction – motor or handwheel.
		Opening	6	Travelling in the open direction – motor or handwheel.
		Moving	7	Travelling – motor or handwheel.
		MidTravelStall	8	Not a limit, motor energised – no output movement detected.
		Stall	10	Motor has stalled.
		LocalStop	14	Red Control knob set to STOP.
		LocalControlEn	15	Red Control knob set to Local.
		RemoteControlEn	16	Red Control knob set to Remote.
		ControlAlarm	17	ESD signal and/or interlock active.
		ESDAcive	18	ESD signal applied.
		OpenInterlock	19	Open Interlock active.
		ClosedInterlock	20	Open Interlock active.
		Interlock	21	Open and/or closed interlock active.
		ManOverride	24	Handwheel operation.
		MotThermostat	30	Motor Thermostat has tripped.
		PStrokePass	31	Partial stroke completed.
		PStrokeFail	32	Partial stroke not completed.
		Monitor	33	Monitor relay de-energised.
		MidTravel	34	Not at Closed or Open limits.
		BluetoothConnected	35	Bluetooth is connected.
		EndPosition	36	Either at Closed or Open limit positions.
		IntermediatePosition	37	Not at Closed or Open limits.
		TorqueTripClosing	38	Torque trip closing – any position.
		TorqueTripOpening	39	Torque trip opening – any position.
		TorqueTrip	40	Torque trip closing or opening – any position.
		TorqueTripMidTravel	41	Torque trip mid-travel, closing or opening.
		PhaseLoss	42	3-phase only – monitored phase 3 lost.
		Cust24VFail	43	Internal 24VDC supply failed (Terminals 4 & 5).
		ActuatorAlarm	44	Internal fault detected.
		ValveAlarm	45	On torque trip mid-travel or motor stall condition.
		BatteryLow	46	Battery low.
		BatteryFlat	47	Battery discharged or missing.
41	FunctionOfS1	Blinker	48	Travelling (make/break at 1 second intervals).
42	FunctionOfS2	DigitalOutput	49	Network option controlled.
43	FunctionOfS3	PStrokeActive	50	Partial stroke underway.
44	FunctionOfS4	Maintenance	51	Scheduled maintenance due.
45	FunctionOfS5	HiTorqueAlarm	52	Set Hi torque value reached.
46	FunctionOfS6	HiHiTorqueAlarm	53	Set Hi-Hi torque value reached.
47	FunctionOfS7	OddParity	54	Set when count of relays set is and odd value.
48	FunctionOfS8	Source1NetworkCommsLoss	55	Communication failure with option 1 card.
49	FunctionOfS9	Source2NetworkCommsLoss	56	Communication failure with option 2 card.
50	FunctionOfS10	NAMURMaintenance	57	A NAMUR maintenance condition is active.
51	FunctionOfS11	NAMUROutOfSpec	58	A NAMUR out of specification condition is active.
52	FunctionOfS12	NAMURFunctionCheck	59	A NAMUR function check condition is active.
		NAMURFailure	60	A NAMUR failure condition is active.
		OverModulation	66	Starts per hour has been exceeded.
		MotorInhibit	67	Motor is inhibited.
		LossOfHMI	74	HMI will not be lit up.
		MaintainFeedback	75	Open/Close signals are maintained.
		GeneralAlarm	80	Anything which constitutes an alarm from the 'function' list triggers this alarm.
		BatBackupAvailable	81	For battery backup only: Checks availability of battery, checks if battery is charged.
		BatBackupControlling	82	For battery backup only: battery is in control.
		BatBackupCharging	93	For battery backup only: battery is charging.
		ClosedLoopControlFail	94	Closed Loop Control failure - due to loss of Setpoint or Feedback signal.
		TorqueOrLimitClose	95	The close position is at its torque limit.
		TorqueOrLimitOpen	96	The open position is at its torque limit.
		LocalClose	97	A local close control has been activated.
		LocalOpen	98	A local open control has been activated.
		Reserved	99	
		Reserved	100	
		Reserved	101	
		Reserved	102	
		Multiportport1	103	Port Position 1 reached.
		Multiportport2	104	Port Position 2 reached.
		Multiportport3	105	Port Position 3 reached.
		Multiportport4	106	Port Position 4 reached.
		Multiportport5	107	Port Position 5 reached.
		Multiportport6	108	Port Position 6 reached.
		Multiportport7	109	Port Position 7 reached.
		Multiportport8	110	Port Position 8 reached.
		Multiportport9	111	Port Position 9 reached.
		Multiportport10	112	Port Position 10 reached.
		Multiportport11	113	Port Position 11 reached.
		Multiportport12	114	Port Position 12 reached.
		Multiportport13	115	Port Position 13 reached.
		Multiportport14	116	Port Position 14 reached.
		Multiportport15	117	Port Position 15 reached.
		Multiportport16	118	Port Position 16 reached.

Note: Enum values 99 onwards not available for v103 EOC firmware

6 Parameters

6.5 Parameter instance attributes

Attribute	Name	Access	Type	Description																
1	Parameter Value	Get / Set	Specified in attributes 4, 5, and 6.	Actual value of parameter. This attribute is read-only if bit 4 of Attribute #4 is true.																
2	Link Path Size	Get	USINT	0x0007 (Size of link path in bytes).																
3	Link Path	Get	Packed EPATH	0x 20 A2 25 nn nn 30 05 Path to the object where this parameter's value is retrieved.																
4	Descriptor	Get	WORD	<table border="1"> <thead> <tr> <th>Bit</th> <th>Contents</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Supports settable path (N/A).</td> </tr> <tr> <td>1</td> <td>Supports enumerated strings.</td> </tr> <tr> <td>2</td> <td>Supports scaling (N/A).</td> </tr> <tr> <td>3</td> <td>Supports scaling links (N/A).</td> </tr> <tr> <td>4</td> <td>Read only parameter.</td> </tr> <tr> <td>5</td> <td>Monitor parameter (N/A).</td> </tr> <tr> <td>6</td> <td>Supports extended precision scaling (N/A).</td> </tr> </tbody> </table>	Bit	Contents	0	Supports settable path (N/A).	1	Supports enumerated strings.	2	Supports scaling (N/A).	3	Supports scaling links (N/A).	4	Read only parameter.	5	Monitor parameter (N/A).	6	Supports extended precision scaling (N/A).
Bit	Contents																			
0	Supports settable path (N/A).																			
1	Supports enumerated strings.																			
2	Supports scaling (N/A).																			
3	Supports scaling links (N/A).																			
4	Read only parameter.																			
5	Monitor parameter (N/A).																			
6	Supports extended precision scaling (N/A).																			
5	Data Type	Get	USINT	Data type code.																
6	Data Size	Get	USINT	Number of bytes in parameter value.																
7	Parameter Name String	Get	SHORT_STRING	Name of the parameter, truncated to 16 chars.																
8	Units String	Get	SHORT_STRING	"" (default string).																
9	Help String	Get	SHORT_STRING																	
10	Minimum Value	Get	See attribute 5.	Minimum value of the parameter.																
11	Maximum Value	Get	See attribute 5.	Maximum value of the parameter.																
12	Default Value	Get	See attribute 5.	Default value of the parameter.																
13	Scaling Multiplier	Get	UINT	0x0001																
14	Scaling Divisor	Get	UINT																	
15	Scaling Base	Get	UINT																	
16	Scaling Offset	Get	INT	0x0000																
17	Multiplier Link	Get	UINT																	
18	Divisor Link	Get	UINT																	
19	Base Link	Get	UINT																	
20	Offset Link	Get	UINT																	
21	Decimal Precision	Get	USINT	0x00																

rotork®

Contact us now

mail@rotork.com

www.rotork.com

PUB190-001-00

Issue 03/26